
# SANUS

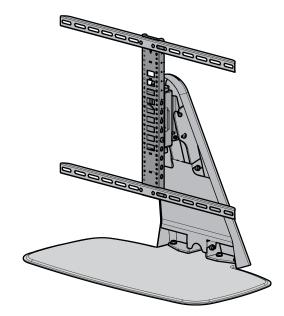

## **WSTV1** INSTRUCTION MANUAL

### We'll Make It Stress-Free

If you have any questions along the way, just give us a call. 1-800-359-5520. We're ready to help!

#### IMPORTANT SAFETY INSTRUCTIONS – SAVE THESE INSTRUCTIONS – PLEASE READ ENTIRE MANUAL PRIOR TO USE

Before getting started, let's make sure this mount is perfect for you!

1

Does your TV weigh *more* than 60 lbs. (27.2 kg) including accessories?



No — Perfect!

Yes — This mount is NOT compatible. Visit sanus.com or call 1-800-359-5520 (UK: 0800-056-2853) to find a compatible mount.

2

Do you have the tools needed?





3

#### Ready to begin?

Please read through these instructions completely to be sure you're comfortable with this easy install process. Also check your TV owner's manual to see if there are any special requirements for mounting your TV.

If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, contact Customer Service at 1-800-359-5520.

**CAUTION:** Avoid potential personal injuries and property damage! Manufacturer is not responsible for damage or injury caused by incorrect assembly or use.

▲ WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of the WSTV1 and the display does not exceed 60 lbs (27.2 kg). Use with heavier televisions may result in instability causing tip over resulting in death or serious injury!

**A WARNING:** Use this mounting system only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

**WARNING:** Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over onto the child.

**WARNING:** Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or overturning onto a child.

**NOTE:** The WSTV1 can support screen sizes up to a maximum of 60" diagonal.


**NOTE:** The WSTV1 has no user serviceable parts.


### **Dimensions**


417.8mm


16.45 in.




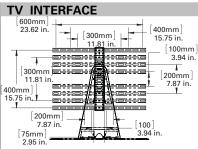


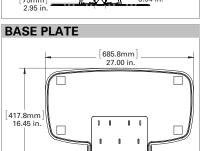


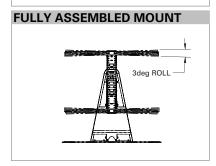


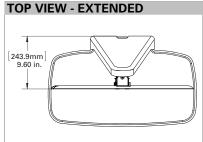

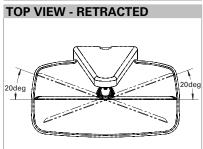

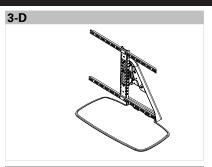


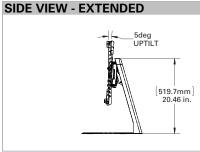

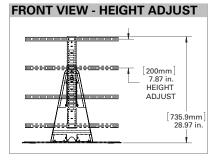

### Dimensions - TV Interface



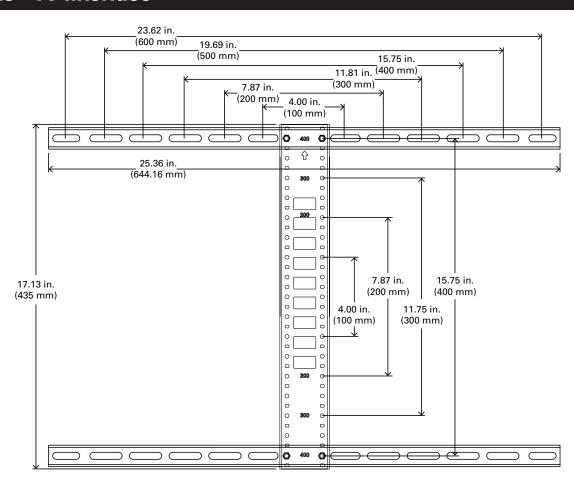



### **Supplied Parts and Hardware**

**WARNING:** This product contains small items that could be a choking hazard if swallowed.

Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

 NOTE: Not all hardware included will be used.

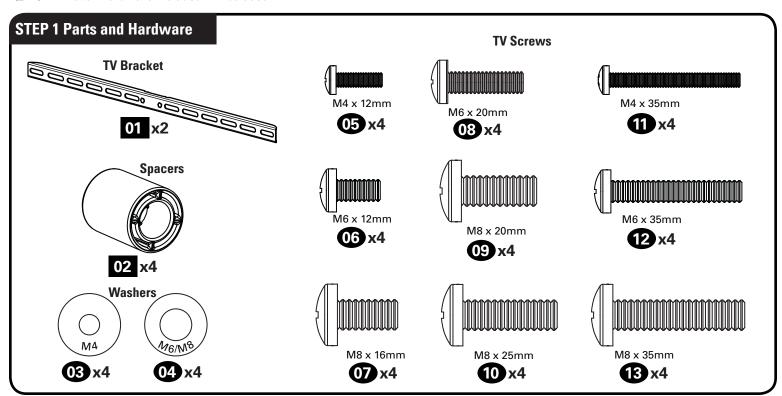

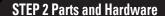

Vertical Height Adjustment Bracket




14 x1

Interface Screws for Vertical Height Adjustment Bracket



10-32 x 3/8 in.



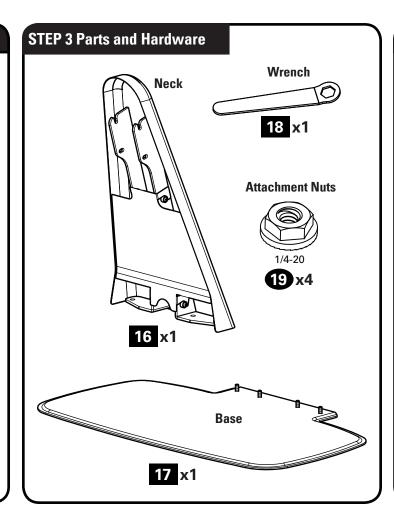

#### **STEP 4 Parts and Hardware**

**Swivel Head** 



20 x1

**Lock Screws** 



1/4-20 x 3/8 in.




#### **STEP 1 Attach TV Brackets to TV**

#### 1.1 Select TV Screw Diameter

Hand thread screws into the threaded inserts on the back of your TV to determine which screw diameter (M4, M6, or M8) to use.



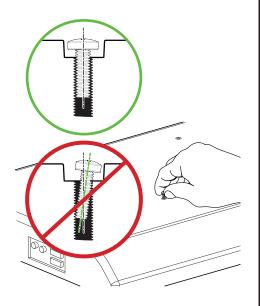


#### 1.2 Select TV Screw Length

If your TV has a flat back AND you want your TV closer to the swivel head of the mount, use the shorter screws.

Spacers and longer screws are supplied to accommodate:

- Round/irregular back TVs
- TVs with inset mounting holes
- Extra space needed for cables

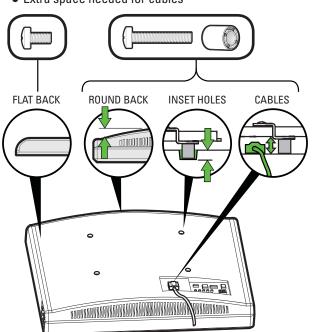


Standard configurations are shown. For special applications, or if you are uncertain about your hardware selection, contact Customer Service at 1-800-359-5520.

#### A CAUTION:

Verify adequate thread engagement with your screw/ washer/spacer combination AND TV bracket.


- Too short will not hold the TV.
- Too long will damage the TV.

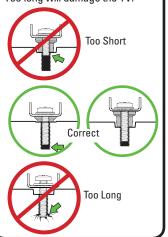

#### 1.3 Attach Horizontal Brackets

Position your TV brackets over your TV hole pattern - making sure the brackets are centered over the TV hole pattern and level. Secure brackets using your screw/washer (**Flat Back**) or spacer/screw/washer (**Round Back / Extra Space**) selection (see 1.2 page 7).

**IMPORTANT**: Ensure TV brackets are securely fastened before moving on to the next step.

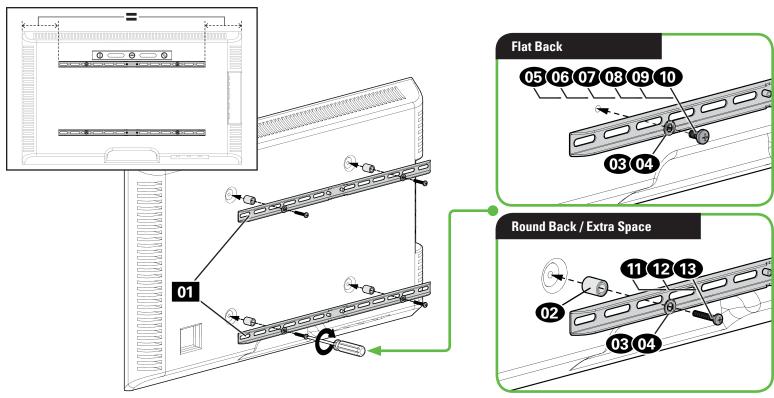


### **STEP 2 Attach Vertical Bracket**

Make sure the vertical height adjustment bracket 14 is centered on the TV.

Secure vertical height adjustment bracket 14 with interface screws 15.


**IMPORTANT**: Ensure all brackets are securely fastened before moving on to the next step.

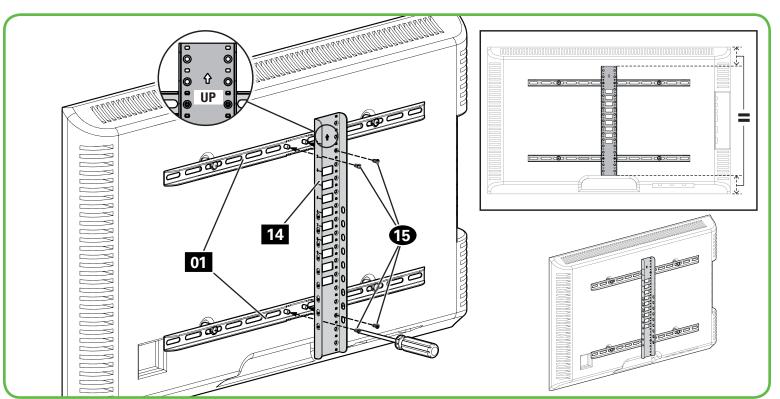


### **STEP 3 Attach Neck to Base**

Attach neck 16 to base 17 with nuts 19. Start by hand tightening the nuts 19 then complete the tightening by using supplied wrench 18.

(IMPORTANT: Ensure neck 16 is securely fastened to base 17 before moving on to the next step.

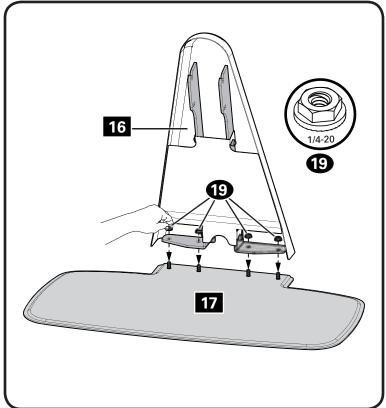


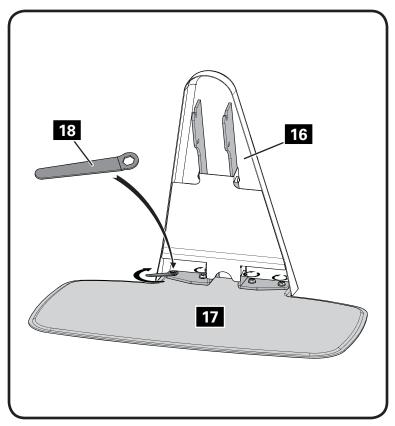


### **STEP 4 Swivel Head to Neck**

**STEP 5 Attach TV to Swivel Head** 


- 1. Hang swivel head 20 onto neck 16.
- 2. Secure with two lock screws 21.

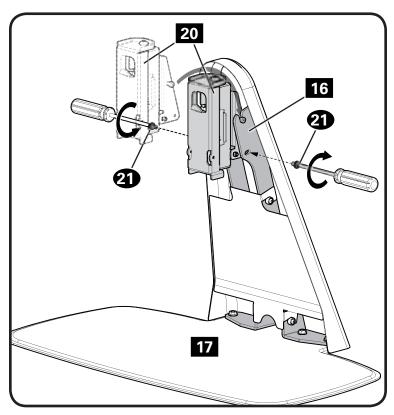


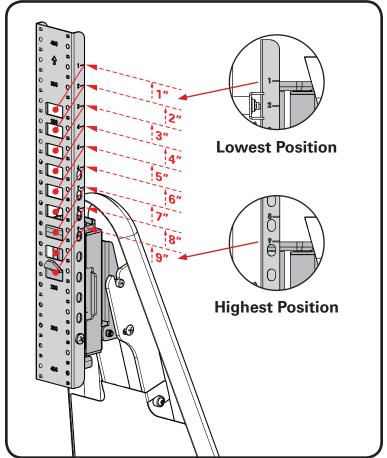

### **STEP 5 Attach TV to Swivel Head (continued)**


- 1. Determine the height from the base that you would like to hang your TV (see examples Page 11).
- 2. Secure the TV/bracket assembly to the swivel head **20** with the two lock screws **21**.
  - **IMPORTANT**: Keep the base clear while installing TV.
  - **(I) IMPORTANT**: Ensure TV/bracket assembly is securely fastened to swivel head **20** before moving on to the next step.

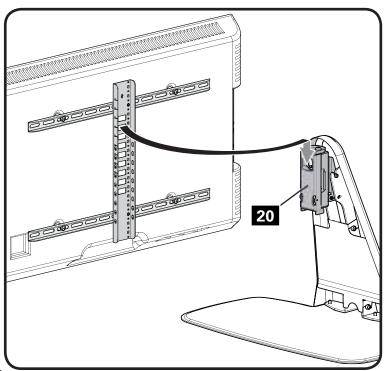


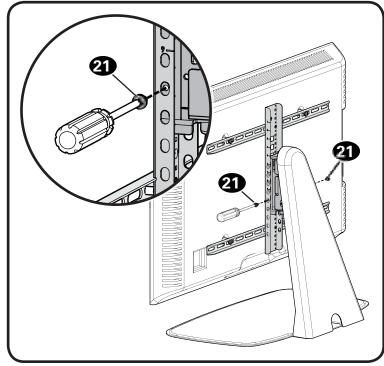

### **Cable Management**

Remove the cable cover **cc**. Route cables down the cable channel of the neck and through the opening in the base of the neck. Replace the cable cover **cc**.

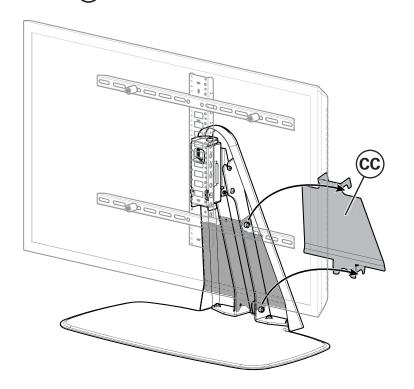

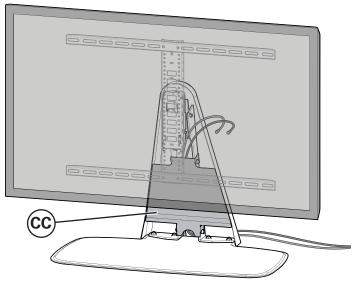


### Adjustments


Post install leveling can be adjusted  $\pm$  1.5 degrees using the adjustment screw (AS) in the swivel head 20.

±1.5° Clockwise ±1.5° Counterclockwise

TV can be swiveled ±20° (40° total) for best viewing angle.

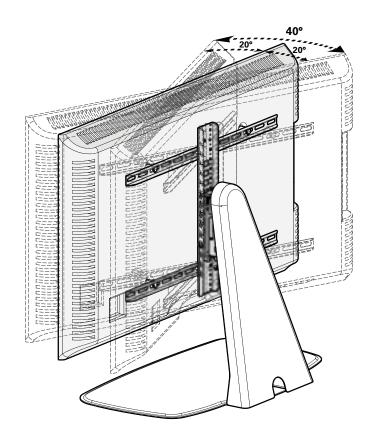

TV can be tilted back 5° for a better viewing angle or to compensate for deflection caused by a heavy TV. To adjust tilt, loosen both lock screws 21, adjust tilt, then tighten both lock screws 21.

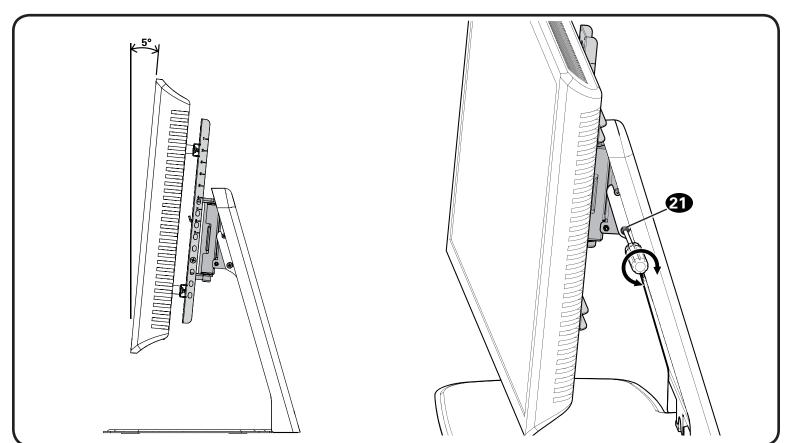



Thank you for choosing Sanus! Please take a moment to let us know how we did:





Call us: 1-800-359-5520 Email us: info@sanus.com Leave a review: sanus.com





Find us on Facebook: SANUS



Follow us on Twitter @sanussystems

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions, or variations. Nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

©2016 Milestone AV Technologies. All rights reserved. Sanus is a division of Milestone. All other brand names or marks are used for identification purposes and are trademarks of their respective owners.

DRAFT COPY

6901-002591 00

SANUS • 6436 City West Parkway • Eden Prairie, MN 55344 USA