 


**SANUS**  
E L I T E

A brand of **legrand**

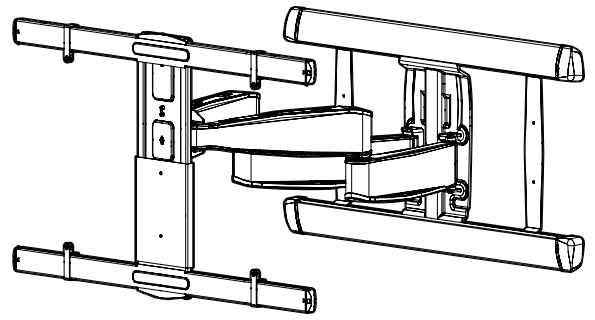

**BXF330-G1**

## ADVANCED FULL-MOTION TV WALL MOUNT

### INSTRUCTION MANUAL

Texto en español, página 14

 
# WE'RE HERE TO HELP



Want to watch a video that shows how easy this DIY project will be?



Watch it now at:  
**SANUS.com/3258**

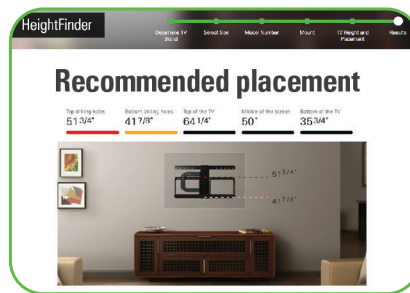

Get it right the first time.  
HeightFinder™ shows you  
where to drill.



Check it out at:  
**SANUS.com/1172**



Our US-based install experts  
are standing by to help.



Call us at:  
US: **+1 (800) 359-5520**



Or, chat at:  
**SANUS.com/chatSP**

# IMPORTANT SAFETY INSTRUCTIONS

## PLEASE READ ENTIRE MANUAL PRIOR TO USE – SAVE THESE INSTRUCTIONS

Please read through these instructions completely to be sure you're comfortable with this easy install process. Check your TV owner's manual to see if there are any special requirements for mounting your TV.

If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, contact Customer Service: +1 (800) 359-5520

### ⚠ CAUTION: Avoid potential personal injuries and property damage!

- This product is designed ONLY to be installed into wood studs, solid concrete or concrete block.  
— **DO NOT INSTALL INTO DRYWALL ALONE — DRYWALL ALONE WILL NOT HOLD THE WEIGHT OF YOUR TV.**
- This product is designed for **INDOOR USE ONLY**.
- The wall must be capable of supporting five times the weight of the TV and mount combined.
- Do not use this product for any purpose not explicitly specified by manufacturer.
- Manufacturer is not responsible for damage or injury caused by incorrect assembly or use.

### TV Weight Limit (including accessories)

**DO NOT EXCEED**



If your TV, plus accessories, weighs **MORE** than indicated, this mount is **NOT** compatible.

Visit [SANUS.com](http://SANUS.com) or call customer service to find a compatible mount. +1 (800) 359-5520

### Wall Construction

**ONLY** install on these acceptable wall types.

? Unsure

Call Customer Service  
+1 (800) 359-5520

 
#### ⚠ CAUTION:

**DO NOT** install in drywall alone

Drywall alone will **NOT** hold the weight of your TV.




#### wood studs

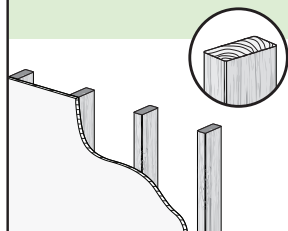



**ACCEPTABLE**
 
#### Solid concrete or concrete block

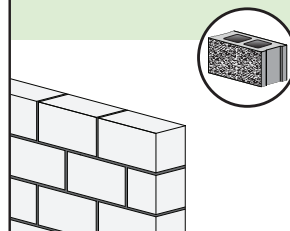

**ACCEPTABLE**
  
### Tools Needed

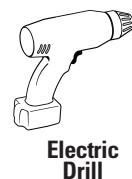

#### Wood Stud Install



 
#### Concrete Install






# DIMENSIONS IN. [MM]


TV INTERFACE

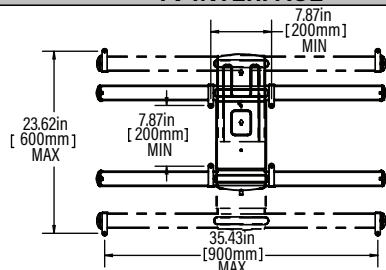


3-D

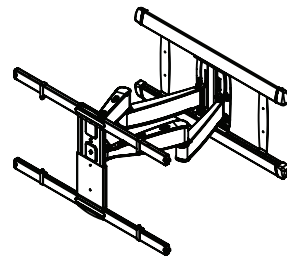 


WALL PLATE

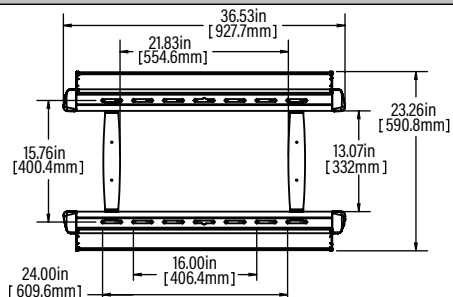 


TOP VIEW - EXTENDED

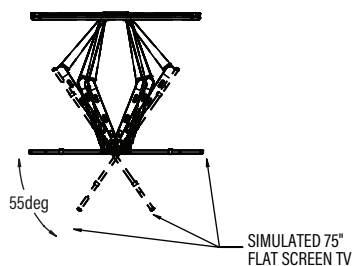 

SIDE VIEW - EXTENDED

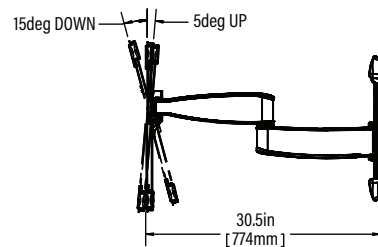 


FULLY ASSEMBLED MOUNT

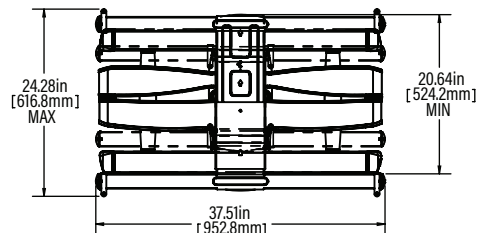 

TOP VIEW - RETRACTED



 SIDE VIEW RETRACTED






## BEFORE YOU BEGIN

**Remove the stand** from your TV — if attached.

**Install any accessories** you may have purchased, if they require TV removal prior to assembly. Note that the TV is removable for future accessory purchases.

   **Protect the face** of your TV when laying it down for installation.

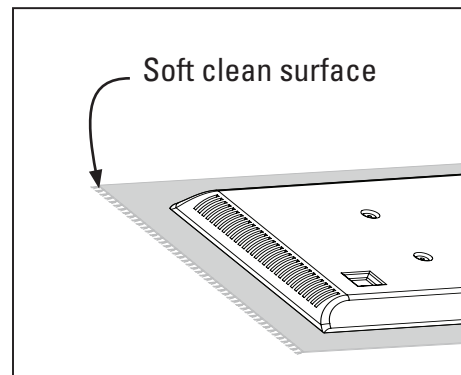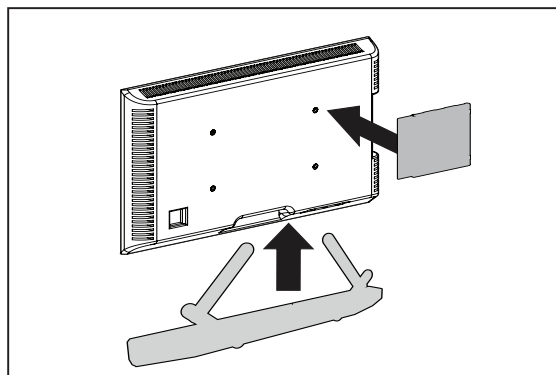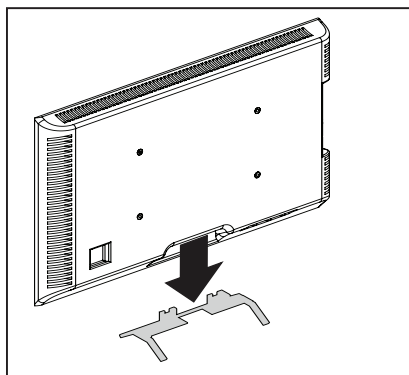

# STEP 1

# ATTACH TV BRACKET TO TV

## Parts and Hardware for STEP 1

**⚠ WARNING:** This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

 
**📄 NOTE:** Not all hardware included will be used.

**01**


### TV Screws

[Only one size fits your TV]  
(qty. 4 each)

**M6**

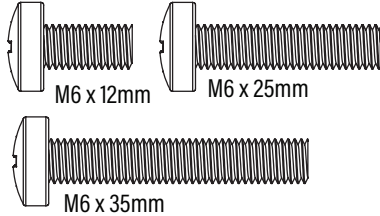

**M8**

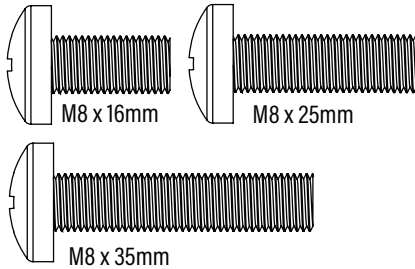 

### Washer

qty. 4

 
**02**



### Spacers


[If necessary]  
(qty. 4 each)

**03**

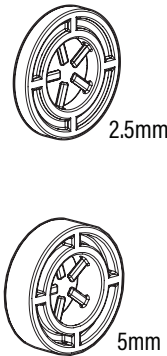

### TV Bracket

 **04** (qty. 1)

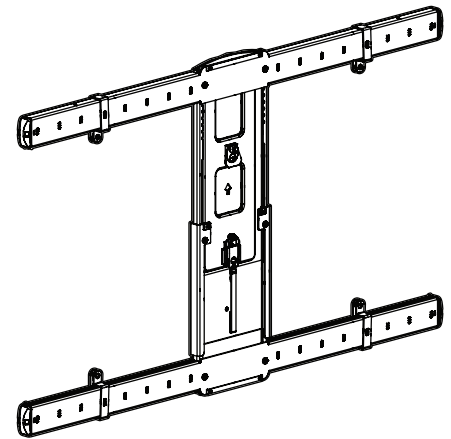


## 1.1 Select TV Screw Diameter

Only one screw size **01** fits your TV.


**M6**

 **M8**

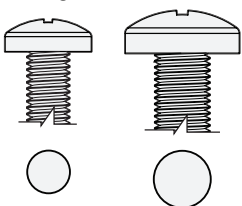

## 1.2 Select TV Screw Length / Spacers
 
### ⚠ CAUTION

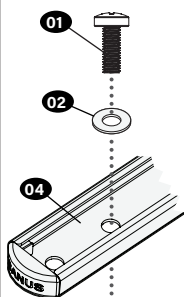

**MINIMUM Three (3) Full Turns of Thread Engagement**

If Screws **01** Hit the Bottom of Your TV, Use Spacers **03**

 


If Your TV Included Spacers or Adapters, Use Them UNDER the Mount Hardware.

### Flat Back TV

[TV brackets lay flat on your TV]


**NO SPACER 03 NEEDED**

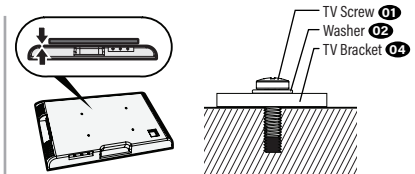

### Flat Back TV

with deep inset holes or cable interference

 
**SPACER(S) 03 NEEDED**

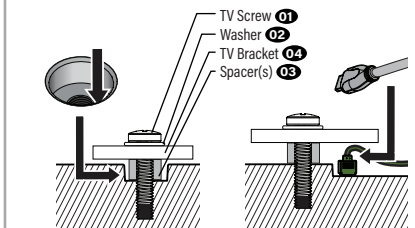

### Rounded or Irregular Back TV



[TV brackets NOT sitting flat on your TV]

 **SPACER(S) 03 NEEDED**

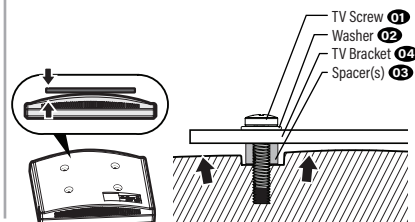

## 1.3 Attach TV Bracket Assembly to TV
  
### 1 MEASURE TV HOLE PATTERN

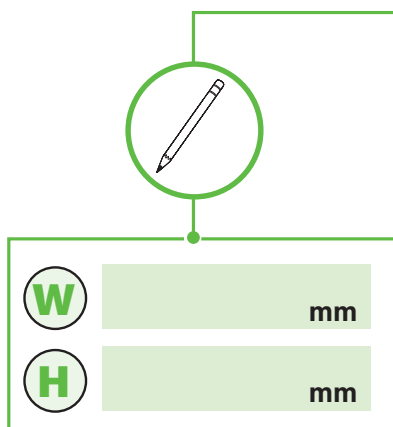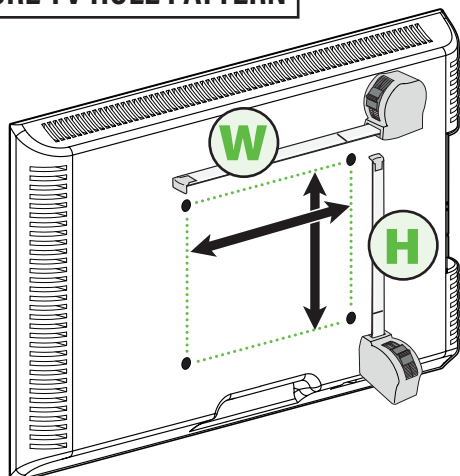

| mm  | cm | inches   |
|-----|----|----------|
| 200 | 20 | 7 7/8    |
| 300 | 30 | 11 3/4   |
| 400 | 40 | 15 3/4   |
| 500 | 50 | 19 11/16 |
| 600 | 60 | 23 5/8   |
| 700 | 70 | 27 9/16  |
| 800 | 80 | 31 1/2   |
| 900 | 90 | 35 7/16  |

inch dimensions are approximate





### 2 ASSEMBLE FOR HEIGHT **H**

    For height **H**  
400 mm  
or LESS


Skip to

**3**  
on **PAGE 6**



For height **H**  
**GREATER** than  
400 mm

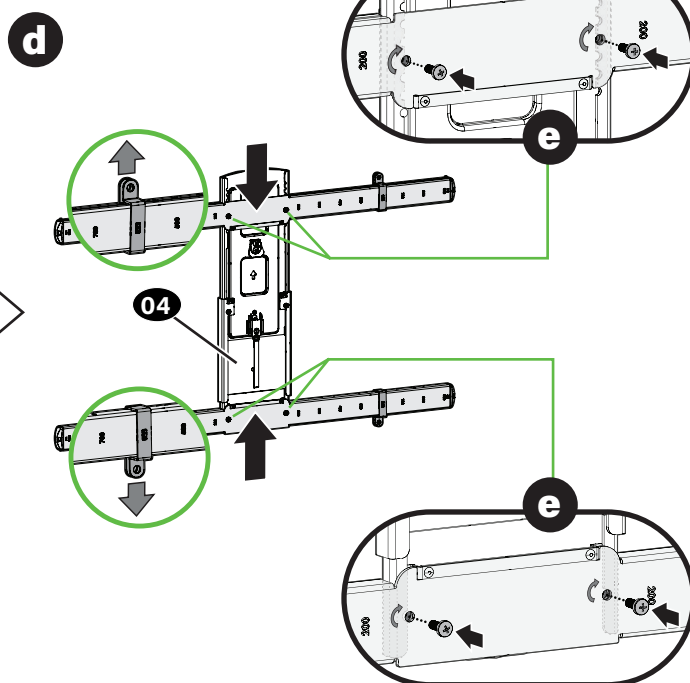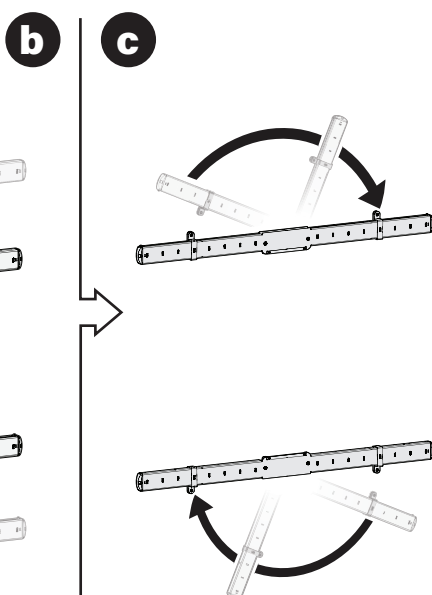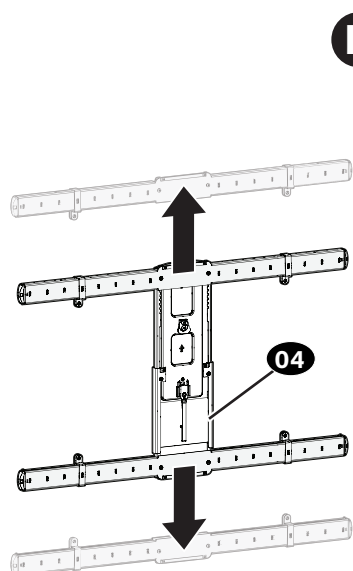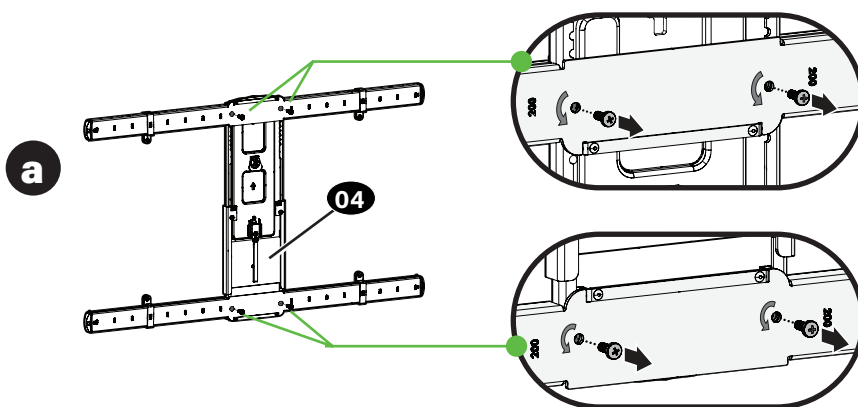


### 3 ADJUST to HOLE PATTERN **W** and **H**

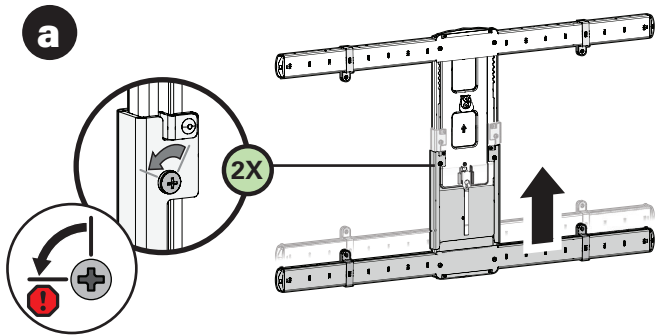 


**b If Necessary**

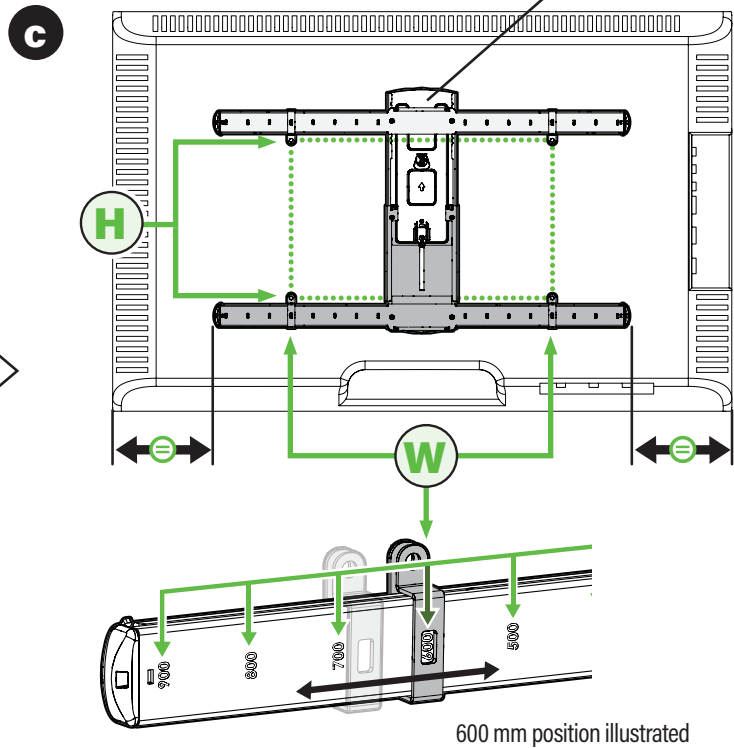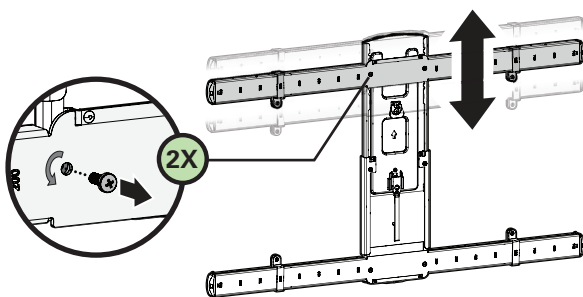  

### 4 LOOSELY ASSEMBLE

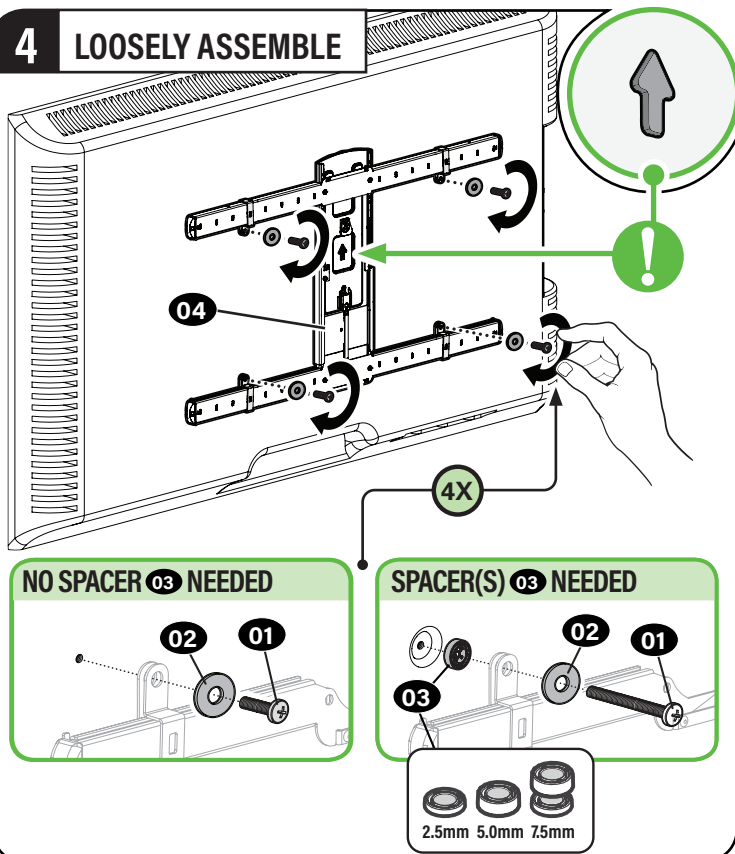 

### 5 TIGHTEN ALL SCREWS

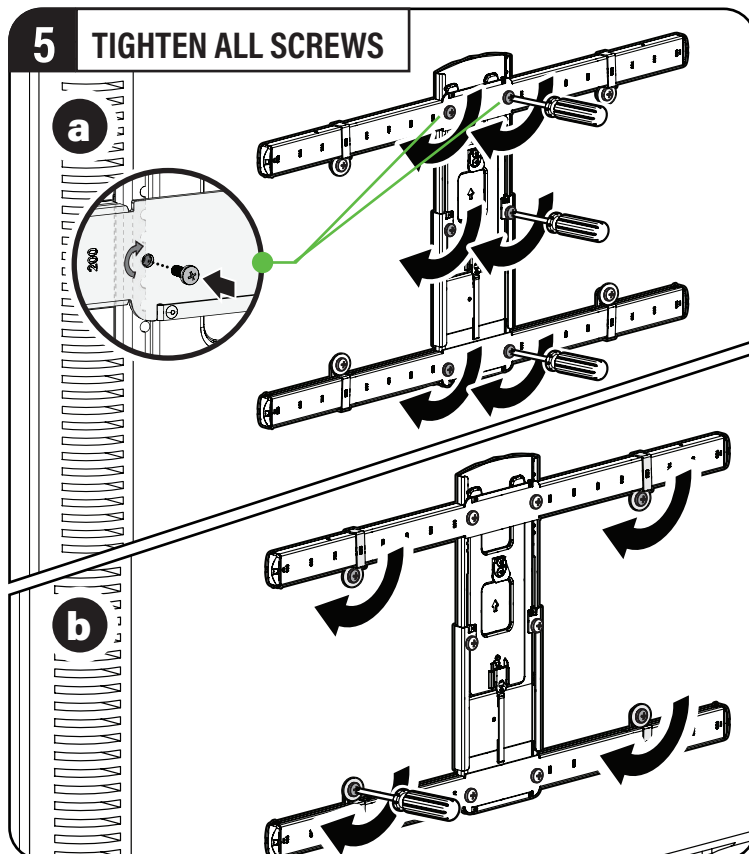 


## STEP 2


## ATTACH WALL PLATE TO WALL

### Parts and Hardware for STEP 2

 **⚠** Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

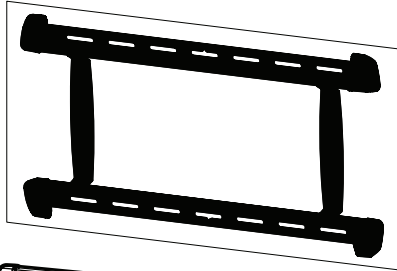

Wall Plate  
Template  
**05** (qty. 1)

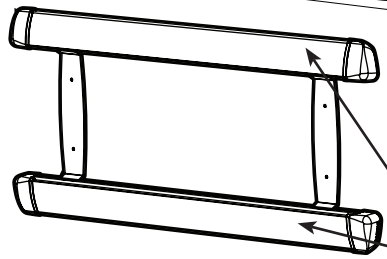 


Wall Plate  
**06** (qty. 1)

**(P)** Cover Plate  
(Attached)

#### Lag Bolt

 **07** (qty. 5)

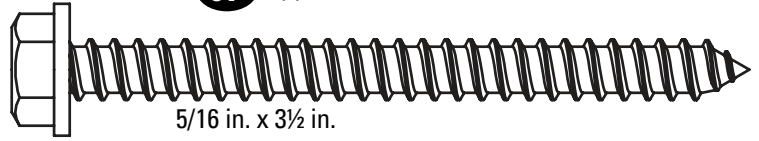


5/16 in. x 3½ in.

#### For STEP 2B: Concrete Installations ONLY

 
**⚠ CAUTION:** Do not use in drywall or wood

#### Concrete Anchor

**08**  
(qty. 5)




Fischer UX10 x 60R

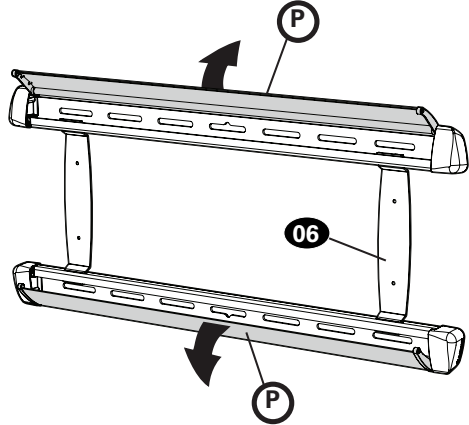 


For **WOOD STUD**  
**INSTALLATIONS**

 Follow 2A on PAGE 8.

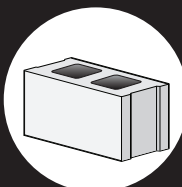

For **CONCRETE**  
**INSTALLATIONS**

 
Follow 2B on PAGE 9.




# Wood Stud Installation

**CAUTION:** Avoid potential personal injury or property damage!

 
- Drywall covering the wall must not exceed 5/8 in. (1.5 cm)
- Minimum wood stud size: nominal 2 x 4 in. (5.1 x 10.2 cm) actual 1 1/2 x 3 1/2 in. (3.8 x 8.9 cm)
- Minimum horizontal space between fasteners: 16 in. (40.6 cm)
- Stud centers must be verified

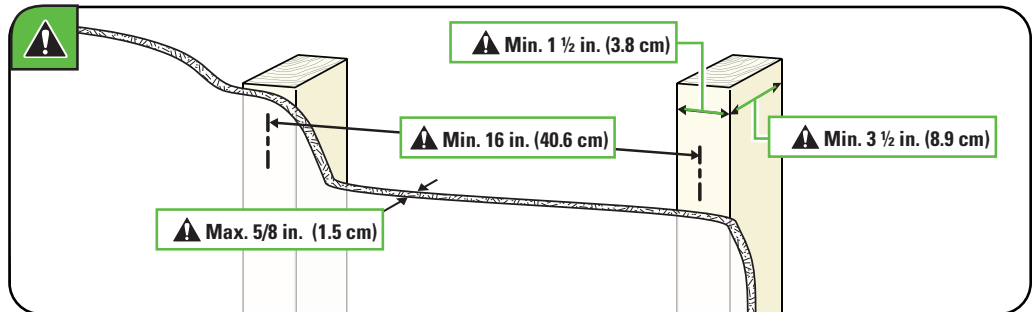


## 1 LOCATE

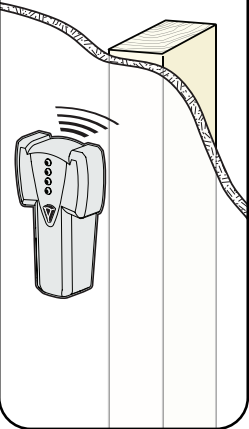 


## 2 VERIFY

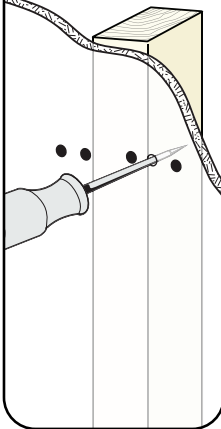 


## 3 MARK

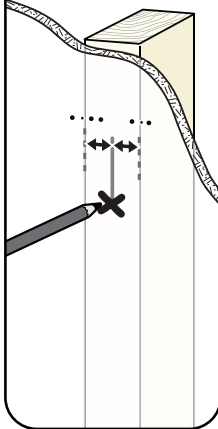 

## 4 POSITION TEMPLATE

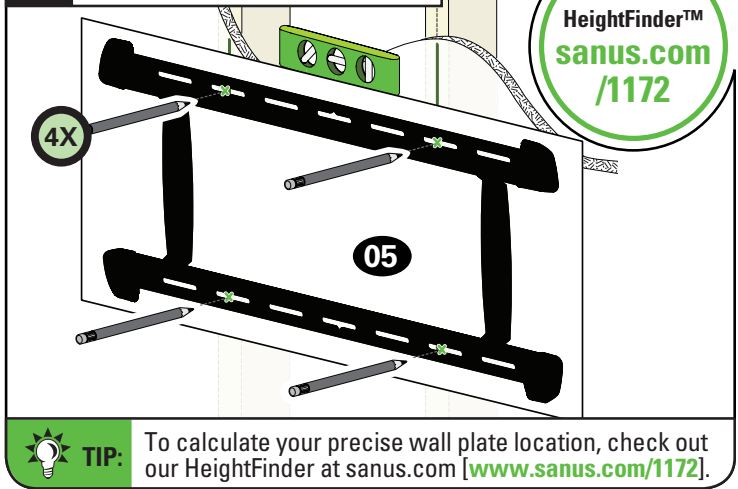 


## 5 DRILL

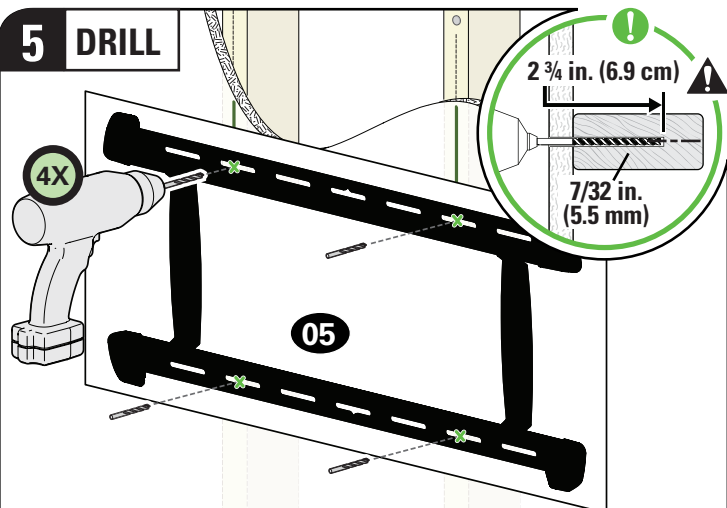 

**CAUTION:** Be sure you drill into the CENTER of the stud.

## 6 SECURELY TIGHTEN

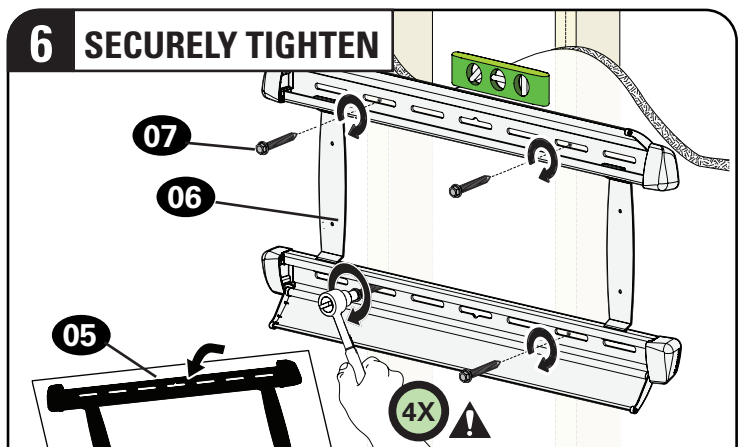 


**CAUTION:** Avoid potential personal injury or property damage!

All four lag bolts **07** MUST BE firmly tightened to prevent unwanted movement of the wall plate **06**. Ensure the wall plate is securely fastened to the wall before continuing on to the next step.

 Skip to STEP 3 on PAGE 10.






# Solid Concrete or Concrete Block Installation

## ⚠ CAUTION: Avoid potential personal injury or property damage!

- Mount the wall plate **06** directly onto the concrete surface
- Minimum **solid concrete** thickness: 8 in. (20.3 cm)
- Minimum **concrete block** size: 8 x 8 x 16 in. (20.3 x 20.3 x 40.6 cm)
- **FOR CONCRETE APPLICATIONS**, arm assembly **09** must remain centered in wall plate **06**. Keep this in mind when selecting the wall plate location


## ⚠ CAUTION: Avoid potential personal injury or property damage!

 Install lag bolts into the slots AS SHOWN.




Three **3X** lag bolts **07** at the top.

 Two **2X** lag bolt **07** at the bottom.

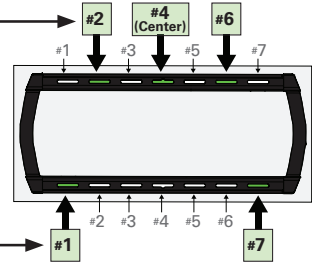


## 1 POSITION TEMPLATE

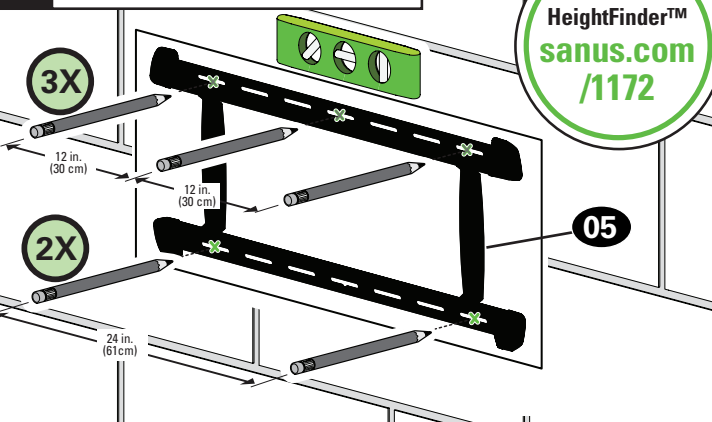 

Visit  
HeightFinder™  
[sanus.com/1172](http://sanus.com/1172)


**TIP:** To calculate your precise wall plate location, check out our HeightFinder at [sanus.com \[www.sanus.com/1172\]](http://sanus.com/1172).

## 2 DRILL

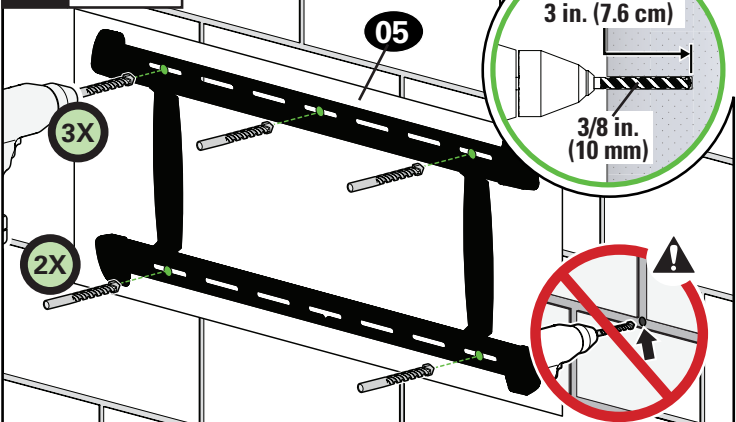 


**CAUTION:** Never drill into the mortar between blocks.

## 3 INSERT ANCHORS

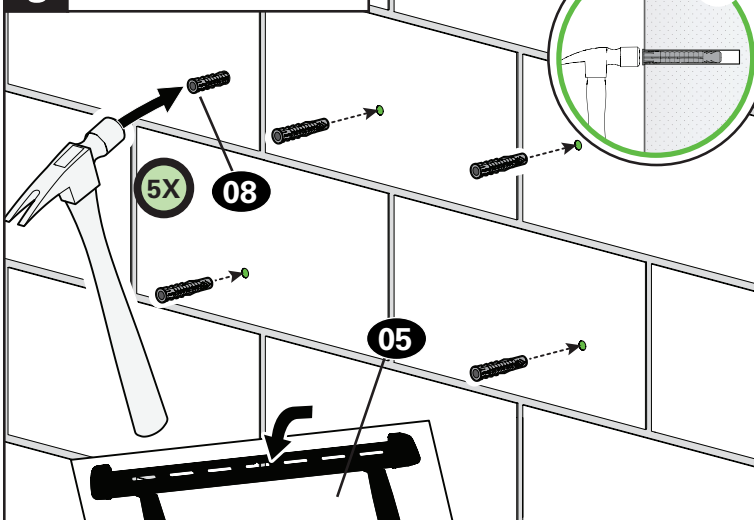 

**CAUTION:** Be sure the anchors **08** are seated flush with the concrete surface.

## 4 SECURELY TIGHTEN

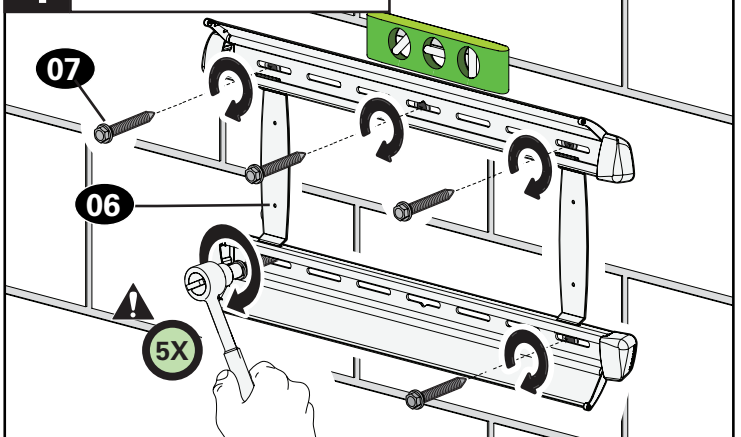 

**CAUTION:** Avoid potential personal injury or property damage!




All five lag bolts **07** MUST BE firmly tightened to prevent unwanted movement of the wall plate **06**. Ensure the wall plate is securely fastened to the wall before continuing on to the next step.

# STEP 3
   
# ATTACH TV TO WALL PLATE

## Parts and Hardware for STEP 3

**⚠ WARNING:** This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

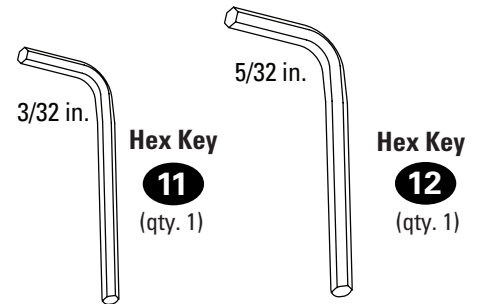
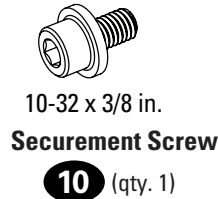
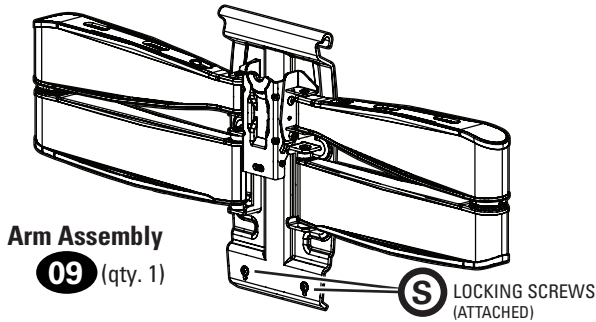


## 3.1 Attach the Arm Assembly to the Wall Plate

### 1 HANG




   **HEAVY!** You may need assistance with this step.

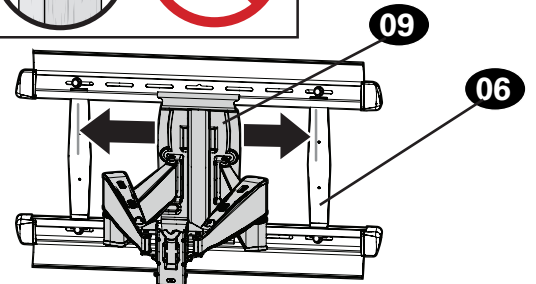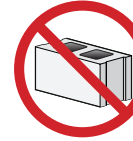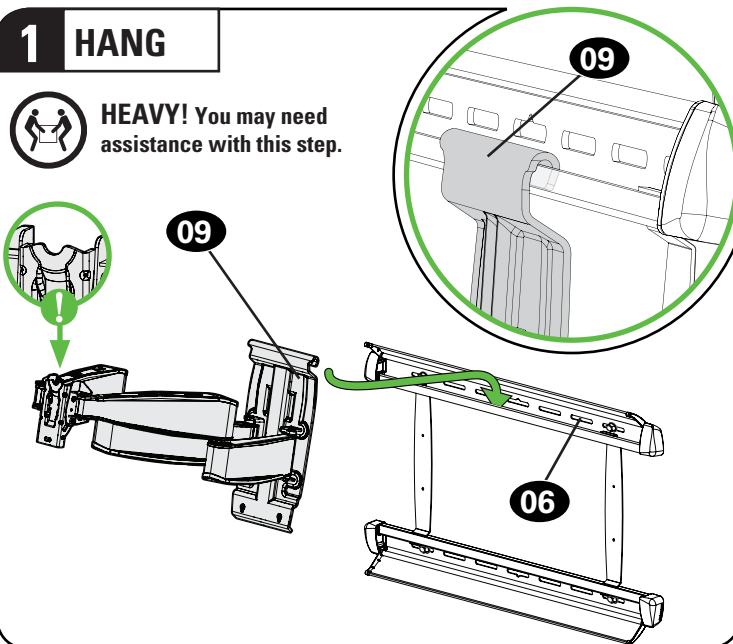

**⚠ CAUTION:** Avoid potential personal injury or property damage!  
For **CONCRETE APPLICATIONS:**  
The arm assembly **09** **MUST** remain centered in wall plate **06**.


### 2 SECURE

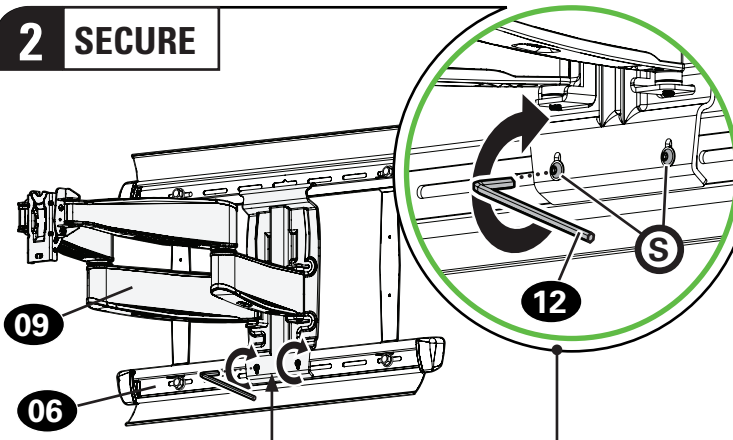 

**⚠ CAUTION:** Avoid potential personal injury or property damage!

Always make sure both locking screws **(S)** are tightened, so the arm assembly **09** is securely fastened to wall plate **06**.

### 3 CLOSE COVERS

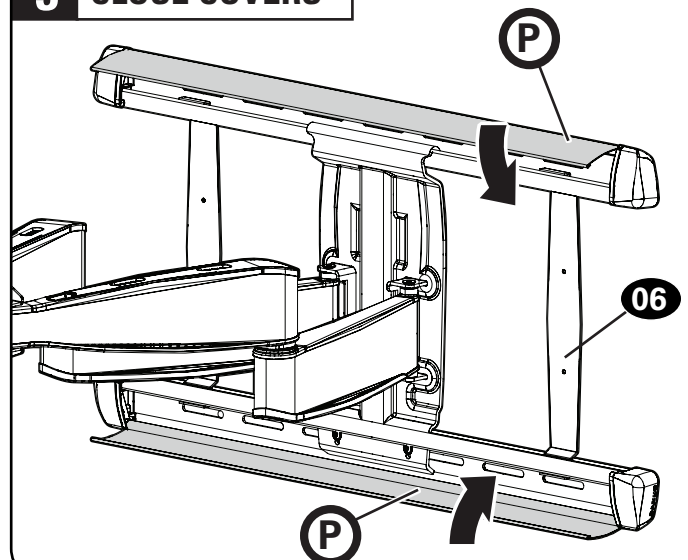 


## 3.2 Hang TV onto Arm Assembly


### 1 HANG YOUR TV



 
**HEAVY!**  
Use two  
people for  
this step.

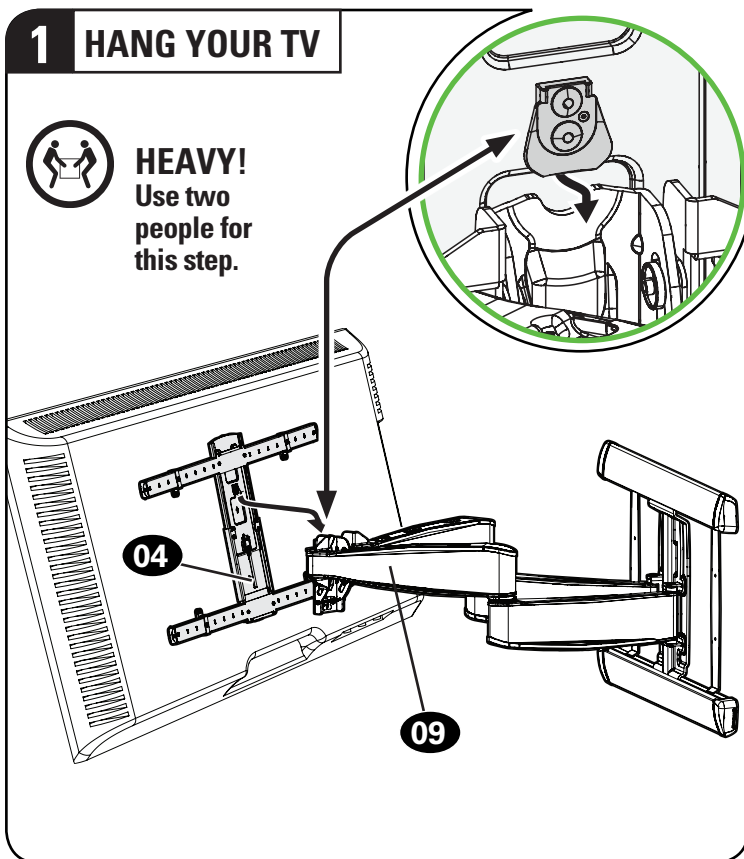

### 2 ATTACH

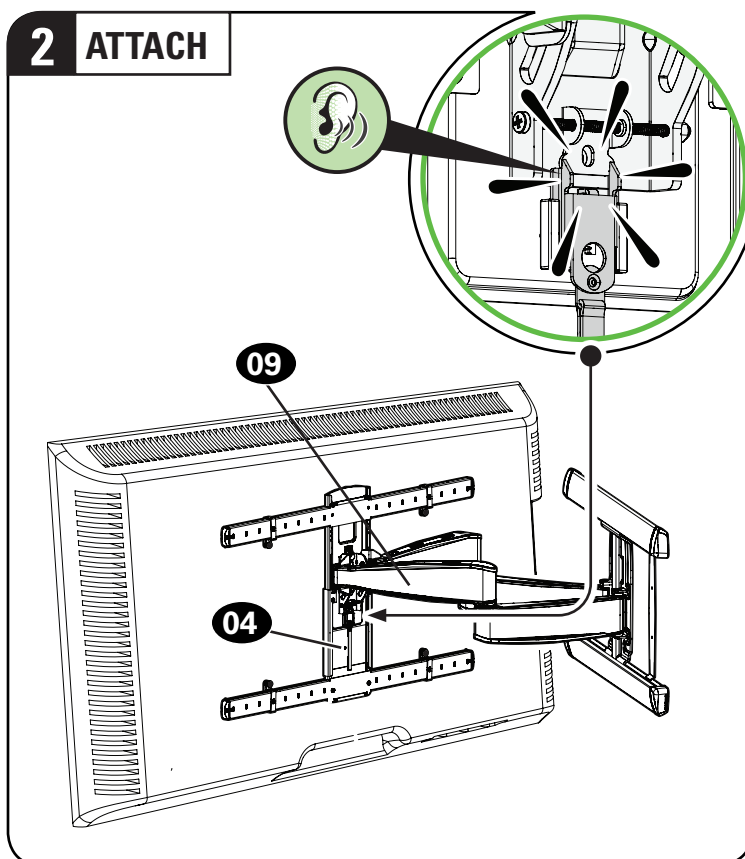 


### 3 SECURELY TIGHTEN

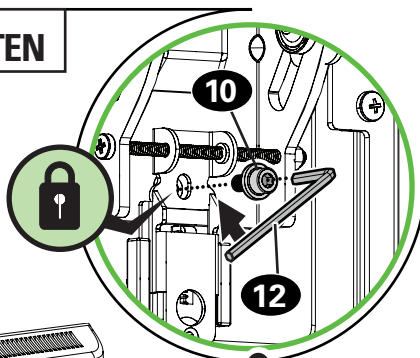 

**TIP:**

 Hex Key **12** stores in arm **09**  
for any future adjustments.

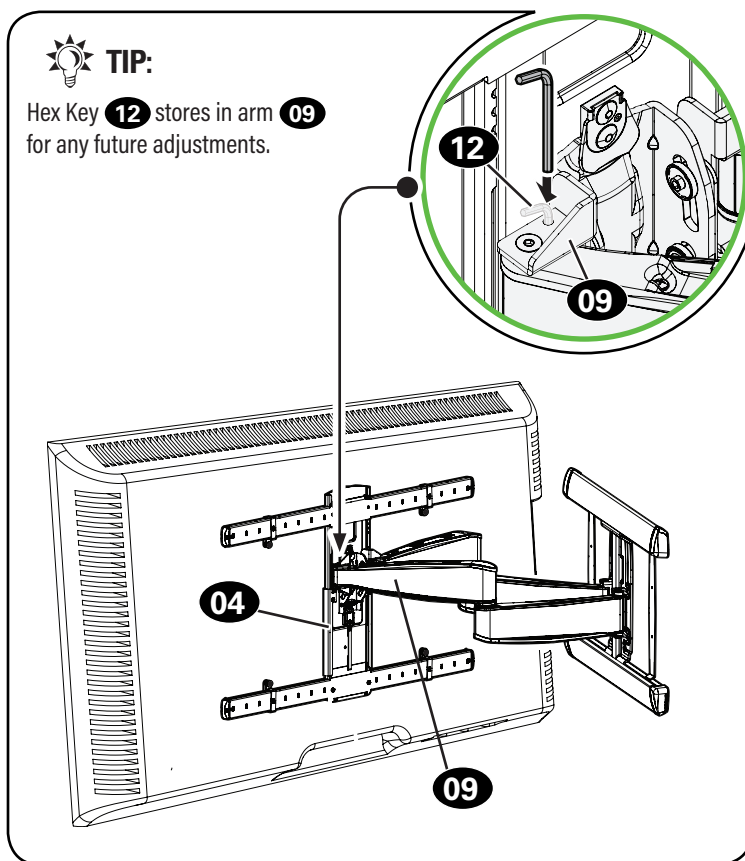


**CAUTION:** Avoid potential personal injury or property damage!

Always make sure your securement screw **10** is tightened, so the TV is securely fastened to the arm assembly **09**.

# MANAGE CABLES

 
## 1 ROUTE CABLES

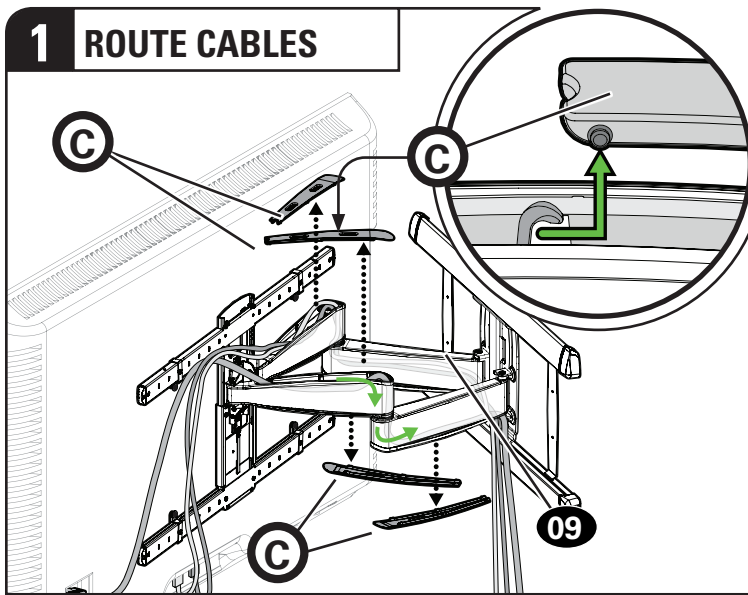

### IMPORTANT:

Pull arm **09** to its full extension, to leave enough slack and prevent stretching the cables when the arms are moved.




 
## 2 ATTACH COVERS

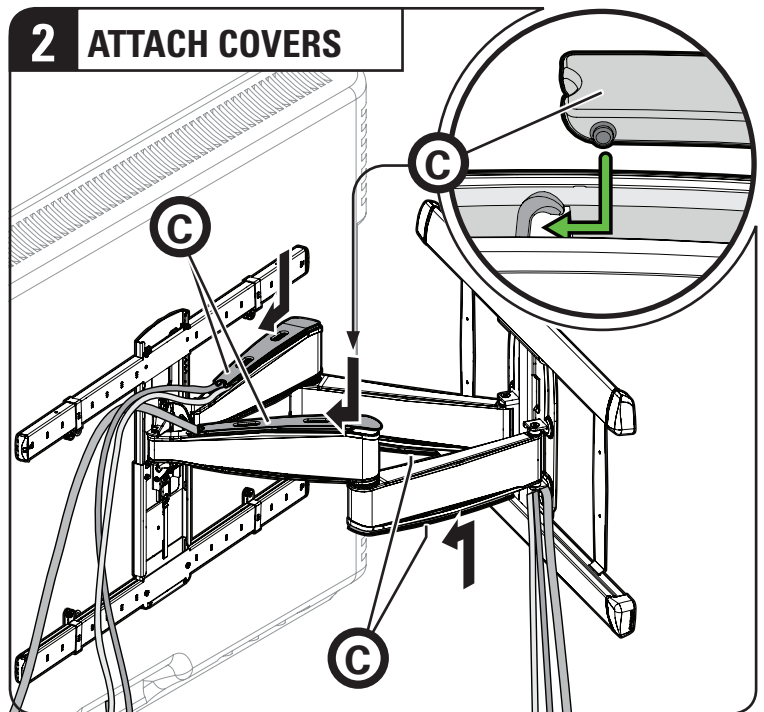

# ADJUSTMENTS


    
## LEVEL

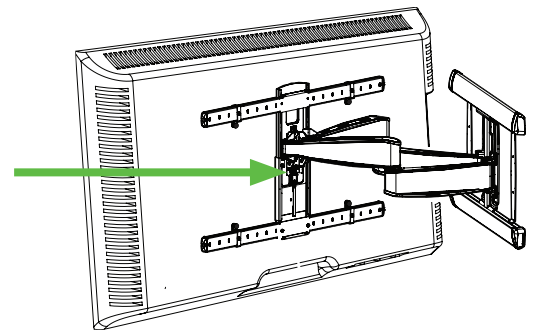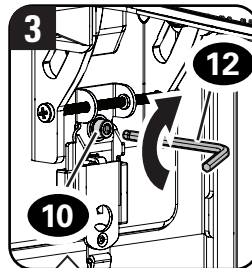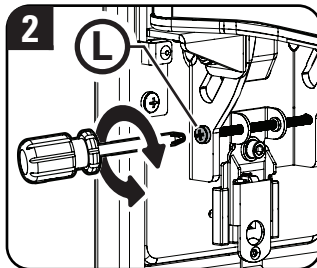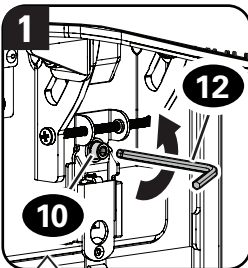

### CAUTION:

Screw **10** MUST be loosened before turning screw **L**.

### CAUTION:

Avoid potential personal injury or property damage! Always make sure your securement screw **10** is tightened, so the TV is securely fastened to the arm assembly **09**.

 
 
 


## TILT

 
Your TV should adjust easily when moved, then stay in place.

Adjust the tilt tension screws **T** if your TV naturally tilts up or down.

**NOTE:** If you do not intend to adjust the tilt for different viewing locations, you can tighten the tilt tension screws **T** to prevent unwanted movement.

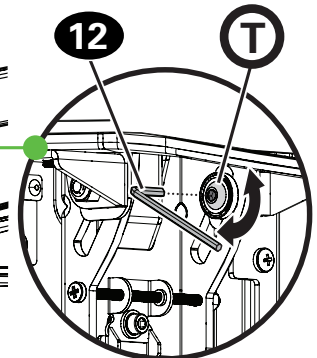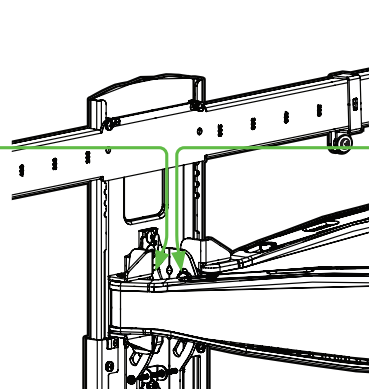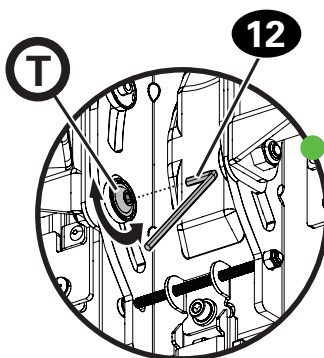





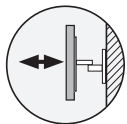


## EXTEND/RETRACT

ONLY IF NEEDED, adjust the extension/retraction arm tension with screw **E** using hex key **11**.

**⚠ CAUTION:** Avoid potential personal injury or property damage!

   DO NOT remove screws **E**, only turn enough for slight adjustment.

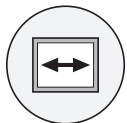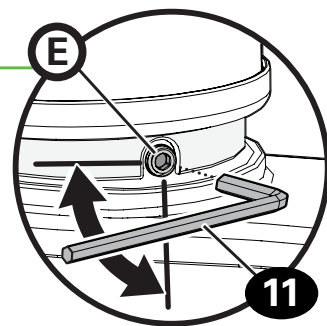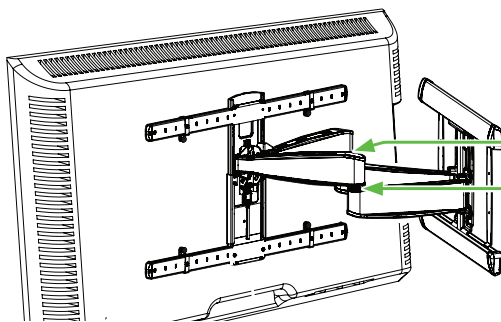

## SIDE-TO-SIDE SHIFT



**HEAVY!** You may need assistance with this step.

**⚠ CAUTION:** Avoid potential injuries or property damage!

Do NOT adjust the arm position from center for concrete applications.

 
 
 
 
 
 
Arm **09** MUST remain centered in wall plate **06** for all concrete applications!

### For wood stud applications ONLY:

1. Remove the TV (See below).
2. Open cover plates **P**.
3. Loosen but **do not remove**, locking screws **S**.
4. Slide arm **09** to the desired position.
5. Tighten locking screws **S**.

**⚠ CAUTION:** Always make sure both locking screws **S** are tightened so the TV is securely fastened to wall plate **06**.






6. Close the cover plates **P**, then hang your TV (see STEP 3).

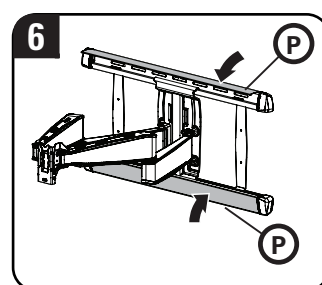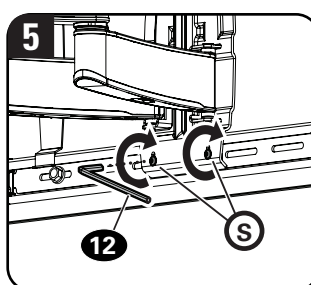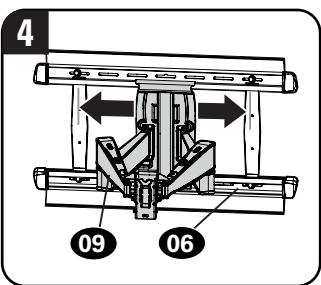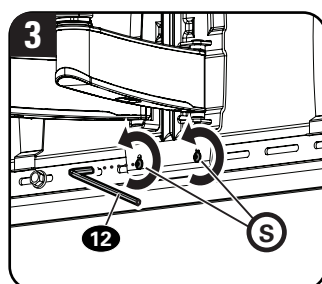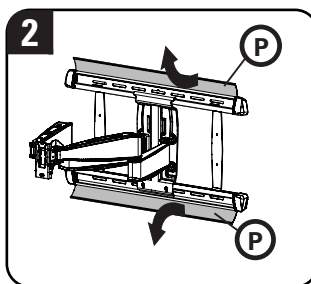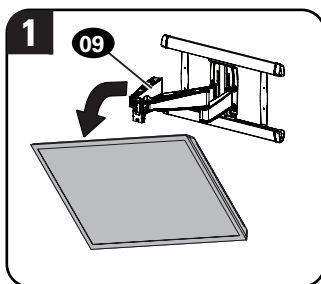

## REMOVING THE TV



   
 
 
**HEAVY!** You may need assistance with this step.

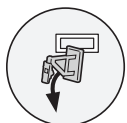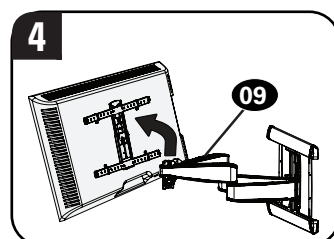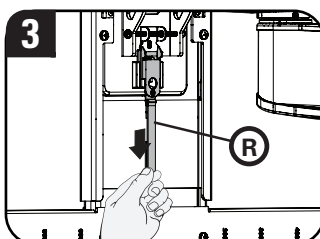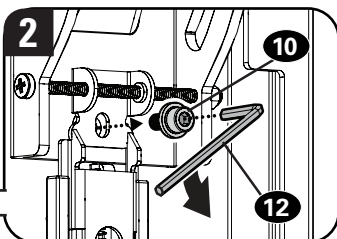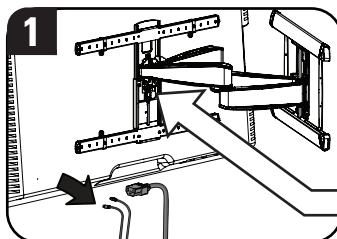

## REMOVING THE ARM



   **HEAVY!** You may need assistance with this step.

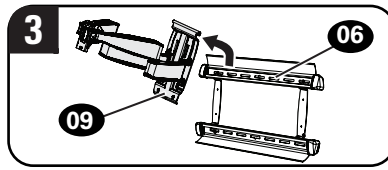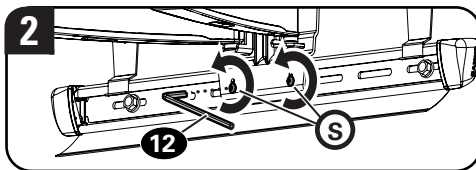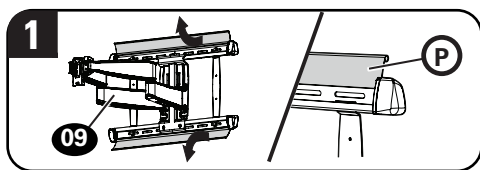

## ¡ESTAMOS AQUÍ PARA AYUDARLE!

¿Desea ver un video para comprobar lo fácil que es hacerlo usted mismo? Visualícelo ahora en: [SANUS.com/3258](https://sanus.com/3258)

Acierte a la primera. HeightFinder™ le indica el lugar donde debe taladrar. Descúbralo en: [SANUS.com/1172](https://sanus.com/1172)

Nuestros expertos en instalación de EE. UU. están listos para ayudar. Llámenos al: **+1 (800) 359-5520**

## INSTRUCCIONES IMPORTANTES DE SEGURIDAD:

### GUARDE ESTAS INSTRUCCIONES Y LEA TODO EL MANUAL ANTES DE UTILIZAR ESTE PRODUCTO.

Lea atentamente estas instrucciones en su totalidad para asegurarse de que está familiarizado con el sencillo proceso de instalación. Consulte igualmente el manual de su televisor para conocer si existen requisitos especiales para el montaje de su aparato. Si no entiende las instrucciones o si tiene dudas acerca de la seguridad de la instalación, el montaje o el uso del producto, póngase en contacto con el Servicio de Atención al Cliente o llame a nuestro servicio técnico.

#### ⚠ PRECAUCIÓN: Evite posibles lesiones personales y daños materiales.

- Este producto se ha diseñado para su uso en montantes de madera, hormigón macizo y paredes de bloques de hormigón: **NO lo instale en paredes únicamente de yeso**
- Este producto está diseñado **SOLO PARA USO EN INTERIORES**.
- La pared debe ser capaz de soportar hasta cinco veces el peso combinado del televisor y la montura
- No utilice este producto para ningún otro propósito que no sea el explícitamente especificado por el fabricante
- El fabricante no se responsabiliza de ningún daño o lesión resultante del montaje incorrecto o el uso indebido

#### Peso máximo (incluidos los accesorios)

**NO EXCEDAS**



Si su TV (incluidos los accesorios) pesa **MÁS**, esta montura **NO** es compatible.

Visite [sanus.com](https://sanus.com) o llame al Cliente o llame a nuestro servicio técnico para encontrar una montura compatible.

#### La construcción de su pared

**SOLAMENTE instalar en estos tipos aceptables de la pared.**

? ¿No está seguro?

Llame al Servicio de Atención al Cliente

#### ⚠ PRECAUCIÓN:

**NO instalar en panel de yeso solo**

Instalación en paneles de yeso solo **NO** soportará el peso de su TV.

Montantes de madera



**ACEPTABLE**

Hormigón macizo o bloque de hormigón



**ACEPTABLE**

#### herramientas necesarias



Cinta métrica



Lápiz



Cinta adhesiva



Nivel



Destornillador



Taladro eléctrico



Llave de tubo de 13 mm (1/2 pulg.)



Instalación en montantes de madera



Localizador de montantes



Punzón



Broca para madera de 5,5 mm (7/32 pulg.)



Instalación en hormigón



Broca para hormigón de 10 mm (3/8 pulg.)



Martillo

## Dimensiones

## Antes de comenzar

PÁGINA 3

Retire el soporte de su televisor... ¡si ya lo tenía instalado claro!

Instale todos los accesorios que quiera añadir a su televisor. Compruebe en los manuales de los accesorios si es necesario instalarlos ANTES de montar el televisor.

Proteja la pantalla del televisor cuando lo ponga boca abajo para la instalación.

## PASO 1

### Fijar el soporte del televisor al televisor

PÁGINA 4

**⚠ ADVERTENCIA:** Este producto contiene piezas pequeñas que, en caso de ser tragadas, podrían producir asfixia. Antes de iniciar el ensamblaje, compruebe que todas las piezas estén incluidas y en buenas condiciones. Si faltan piezas o alguna está dañada, no devuelva el artículo al distribuidor. Póngase en contacto con el servicio de atención al cliente. Nunca utilice piezas deterioradas.

**📋 NOTA:** No todos los elementos de sujeción incluidos deberán utilizarse.

#### 1,1 Seleccione los tornillos del televisor

Solo un tamaño de tornillo **01** es compatible con su TV.

#### 1,2 Determine el espaciador que necesita para su tipo de televisor

##### ⚠ PRECAUCIÓN

MÍNIMO Tres (3) giros completos de acoplamiento de la rosca

Si los tornillos **01** llegan al fondo del televisor, utilice separadores **03**

Si el televisor incluye separadores o adaptadores, utilícelos BAJO los accesorios de montaje.

#### Televisor de fondo plano

[Los soportes del televisor quedan planos sobre el televisor]

**NO SE NECESITA 03 SEPARADOR**

Televisor de fondo plano con orificios intercalados profundos o interferencia de cables

**SE NECESITA(N) 03 SEPARADOR(ES)**

#### Fondo del televisor redondeado o irregular

[Los soportes del televisor no quedan planos sobre el televisor]

**SE NECESITA(N) 03 SEPARADOR(ES)**

#### 1,3 Fije las placas de sujeción al televisor

##### 1 MEDIR

##### 2 ARME LA PLACA DE SUJECIÓN DEL TELEVISOR PARA LA ALTURA

**📋 NOTA:** Para televisores con patrón de orificios una altura de 400 mm o menos, Vaya al PASO 3 (Página 6).

##### 3 AJUSTAR A LA TELEVISOR

##### 4 MONTAR SIN APRETAR

##### 5 APRETAR TODOS LOS TORNILLOS

## PASO 2

### Fijar la placa mural a la pared

PÁGINA 7

**⚠ ADVERTENCIA:** Este producto contiene piezas pequeñas que, en caso de ser tragadas, podrían producir asfixia. Antes de iniciar el ensamblaje, compruebe que todas las piezas estén incluidas y en buenas condiciones. Si faltan piezas o alguna está dañada, no devuelva el artículo al distribuidor. Póngase en contacto con el servicio de atención al cliente. Nunca utilice piezas deterioradas.

**📋 NOTA:** No todos los elementos de sujeción incluidos deberán utilizarse.

SOLO para instalaciones en hormigón

**⚠ PRECAUCIÓN:** No usar en placas de yeso o montantes de madera

**08**



INSTALACIÓN EN MONTANTES DE MADERA

Siga 2A en la PÁGINA 8.



INSTALACIÓN EN HORMIGÓN MACIZO Y BLOQUES DE HORMIGÓN

Siga 2B en la PÁGINA 9.





**⚠ PRECAUCIÓN:** Evite posibles lesiones físicas y daños materiales. ● El yeso que recubre la pared no debe exceder los 1,5 cm (5/8 pulg.). ● Tamaño mínimo del montante de madera: nominal 5,1 x 10,2 cm (2 x 4 pulg.) actual 3,8 x 8,9 cm (1 ½ x 3 ½ pulg.). ● Espacio horizontal mínimo entre los elementos de sujeción: 40,6 cm (16 pulg.). ● Debe comprobar los montantes centrales.

## 1 LOCALIZAR LOS MONTANTES

## 2 VERIFICAR LOS BORDES DE LOS MONTANTES

## 3 MARCAR LOS CENTROS DE LOS MONTANTES

## 4 COLOCAR LA PLANTILLA

**🔧 CONSEJO:** Para calcular la ubicación concreta de la placa mural, pruebe nuestra herramienta HeightFinder disponible en sanus.com [www.sanus.com/1172].

## 5 TALADRAR ORIFICIOS EN LOS CENTROS DE LOS MONTANTES

**6 APRETAR CON FIRMEZA** **⚠ PRECAUCIÓN:** Evite posibles lesiones físicas y daños materiales. Los cuatro tornillos **07** DEBEN ESTAR ajustados con firmeza para evitar el movimiento no deseado de la placa mural **06**. Asegúrese de que la placa de pared esté bien fijada a la pared antes de continuar con el paso siguiente.

Vaya al PASO 3 en la PÁGINA 10.



**⚠ PRECAUCIÓN:** Evite posibles lesiones físicas y daños materiales. ● Instale la placa mural **06** directamente sobre la superficie de hormigón. ● Espesor mínimo del **hormigón**: 20,3 cm (8 pulg.). ● Tamaño mínimo del **bloque de hormigón**: 20,3 x 20,3 x 40,6 cm (8 x 8 x 16 pulg.). ● Para las aplicaciones sobre **hormigón**, de brazo **09** deben estar centrados en la placa mural **06**. Tenga esto en cuenta al seleccionar la ubicación de la placa mural.

**⚠ PRECAUCIÓN:** Evite posibles lesiones personales o daños materiales.

Instale los pernos tirafondo **07** en las ranuras **COMO SE MUESTRA**. Tres (3) pernos tirafondo **07** en la parte superior. Dos (2) pernos tirafondo **07** de retardo en la parte inferior.

## 1 COLOCAR LA PLANTILLA

**🔧 CONSEJO:** Para calcular la ubicación concreta de la placa mural, pruebe nuestra herramienta HeightFinder disponible en sanus.com [www.sanus.com/1172].

## 2 TALADRAR LOS ORIFICIOS

## 3 INSERTAR LOS ANCLAJES

## 4 APRETAR CON FIRMEZA

**⚠ PRECAUCIÓN:** Evite posibles lesiones físicas y daños materiales. Los cinco tornillos **07** DEBEN ESTAR ajustados con firmeza para evitar el movimiento no deseado de la placa mural **06**. Asegúrese de que la placa de pared esté bien fijada a la pared antes de continuar con el paso siguiente.

Vaya al PASO 3 en la PÁGINA 9.

### 3,1 Fije El Conjunto Del Brazo A La Placa Mural

**1 COLGAR** **⚠ ¡ELEMENTO PESADO!** Es posible que necesite ayuda en este paso.

**⚠ PRECAUCIÓN:** Evite posibles lesiones físicas y daños materiales. Para **APLICACIONES EN HORMIGÓN**: del brazo **09** DEBEN estar centrados en la placa mural **06**.

**📋 NOTA:** Para **APLICACIONES SOBRE MONTANTES DE MADERA**, del brazo **09** se pueden deslizar a cualquier parte de la placa **06** para conseguir colocar su televisor en una posición óptima.

**2 ASEGURAR** **⚠ PRECAUCIÓN:** Evite posibles lesiones físicas y daños materiales. Fije usando los cuatro tornillos **05** con la llave hexagonal **12**.

## 3 CERRAR LAS CUBIERTAS **P**

### 3,2 Cuelgue El Televisor En El Conjunto De Brazo

**1 COLOCAR** **⚠ ¡ELEMENTO PESADO!** Es posible que necesite ayuda en este paso.

## 2 FIJAR

## 3 APRETAR FIRMEMENTE

**⚠ PRECAUCIÓN:** Evite posibles lesiones físicas y daños materiales. Asegúrese siempre de que el tornillo de seguridad **10** esté bien apretado, para que el televisor quede fijado de forma segura al conjunto del brazo **09**.

**🔧 CONSEJO:** La llave hexagonal **12** se guarda en el brazo **09** para cualquier ajuste futuro.

## Organizar los cables

1. Retire la cubierta de los cables **03**. 2. **⚠ IMPORTANTE:** xtienda el brazo **09** por completo antes de pasar los cables. 3. Pase los cables por el brazo **09**. 4. Vuelva a colocar la cubierta de los cables **03** por sobre los cables.

## Ajustes



### NIVEL

**⚠ PRECAUCIÓN:** Se DEBE aflojar el tornillo **10** antes de girar el tornillo **01**.

1. Afloje el tornillo **09**. 2. Ajuste el nivel de su televisor girando el tornillo **01** de ajuste de nivel. 3. Apriete el tornillo **10**.



### INCLINACIÓN

El televisor debe acomodarse fácilmente al moverlo, y luego quedar en su lugar. Si el televisor está demasiado suelto o demasiado ajustado, ajuste los tornillos de tensión **11** con la llave hexagonal **12**.

**📋 NOTA:** Una vez que el televisor esté en su lugar, ajuste los tornillos de tensión **11** para evitar un movimiento indeseado.



### EXTENDER / RETRAER

#### EXTENSIÓN / RETRACCIÓN -- SOLO SI ES NECESARIO

El televisor debe acomodarse fácilmente al moverlo, y luego quedar en su lugar. Si el televisor está demasiado suelto o demasiado ajustado, ajuste el tornillo **05** con la ayuda de la llave hexagonal **11**.

**⚠ PRECAUCIÓN:** Evite posibles lesiones personales o daños materiales. NO quite el tornillo **05**, solo girar suficiente para un ligero ajuste.



**DESPLAZAMIENTO LATERAL DEL TELEVISOR** **⚠ ¡ELEMENTO PESADO!** Es posible que necesite ayuda en este paso.

**⚠ PRECAUCIÓN:** Evite posibles lesiones personales o daños materiales. NO ajuste la posición del brazo desde el centro cuando esté colocado sobre hormigón. El brazo **09** DEBE permanecer centrado en la placa mural **06** cuando se coloque sobre hormigón.

#### SOLO PARA APLICACIONES EN MONTANTES DE MADERA:

1. Retire el televisor. 2. Retire las tiras de recubrimiento **02**. 3. Afloje, pero no retire por completo, los tornillos de bloqueo **05**. 4. Deslice el brazo **09** a la posición deseada. 5. Apriete los tornillos de bloqueo **05**.

**⚠ PRECAUCIÓN:** Evite posibles lesiones físicas y daños materiales. Asegúrese siempre de que los dos tornillos de bloqueo **05** estén bien apretados para que el televisor quede fijado de forma segura a la placa mural **06**.

6. Vuelva a colocar las tiras de recubrimiento **02** y el televisor (ver PASO 3).



**RETIRAR EL TELEVISOR** **⚠ ¡ELEMENTO PESADO!** Es posible que necesite ayuda en este paso.



**RETIRE EL CONJUNTO DEL BRAZO**



## Thank you for choosing SANUS Elite!

Please take a moment to let us know how we did:



Call us at: **800-359-5520**



Or, chat at: **SANUS.com/chatSP**



**SANUS.com**

Legrand AV Inc. and its affiliated corporations and subsidiaries (collectively, "Legrand"), intend to make this manual accurate and complete. However, Legrand makes no claim that the information contained herein covers all details, conditions, or variations. Nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Legrand makes no representation of warranty, expressed or implied, regarding the information contained herein. Legrand assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

©2024 Legrand AV Inc. All rights reserved. SANUS Elite is a brand of Legrand. SANUS Elite, HeightFinder and the Elite logo are trademarks of Legrand.