

**SANUS®**



THANK YOU FOR CHOOSING **SANUS**  
THE #1 TV MOUNT BRAND IN THE US.


**BLT1** Instruction Manual

Scan for easy  
install video




# SANUS MAGNETIC STUD FINDER

Designed to find your studs and make life easier – included in hardware kit.

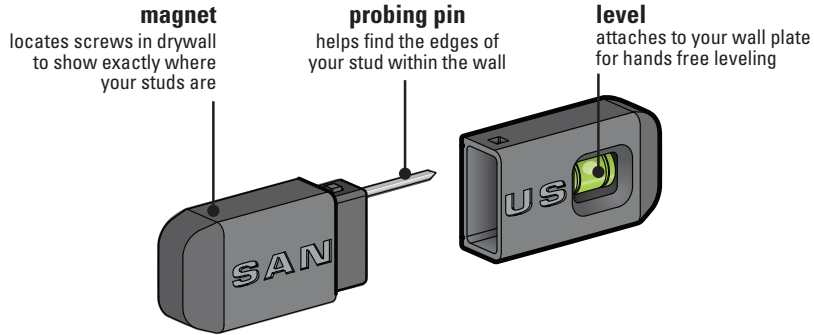


## TWO SIMPLE STEPS TO FINDING YOUR STUDS:

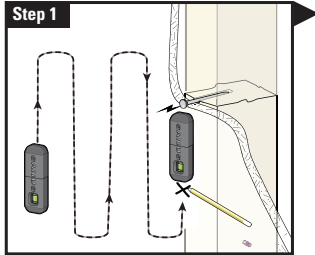

Holding it vertically, lightly move the SANUS Magnetic Stud Finder up and down while sliding across your wall. The magnet within will be attracted to the screws in the stud.


Once the magnet has landed on a screw, place a pencil mark on the wall directly below the magnet.

You can verify this is a stud by moving the Magnetic Stud Finder up or down to find a second or third screw within the wall.

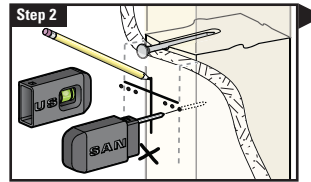

Pull apart the SANUS Magnetic Stud Finder to expose the probing pin within. Starting about  $\frac{1}{2}$  inch away from the first pencil mark insert the probing pin into the wall every  $\frac{1}{8}$  inch until it inserts completely into the wall. Once that happens, you know you've found one edge of your stud. Repeat this process till you have found the stud edges and center of the stud.

**⚠ WARNING:** This product contains a magnet. If an implanted medical device such as a pacemaker or implantable cardioverter defibrillator (ICD) is in use, magnetic fields may affect the operation of those devices, resulting in serious injury or death. If you have an implanted medical device, keep at least 13 cm (5in.) between your device and the magnet. Please consult with your physician or medical professional prior to using this product.

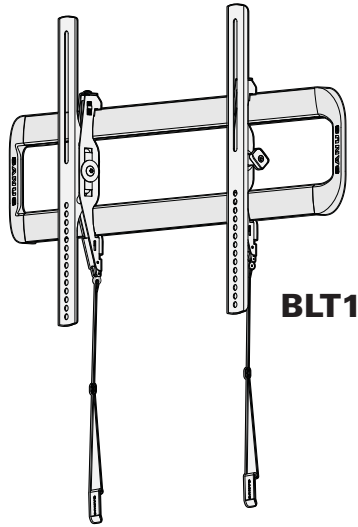

## **We'll Make It Stress-Free**

If you have any questions along the way, just give us a call.  
1-800-359-5520 (UK: 0800-056-2853) We're ready to help!












## **Lo haremos sin estrés**

Si tiene preguntas mientras realiza la instalación, llámenos.  
1-800-359-5520 (Reino Unido: 0800-056-2853) Estamos listos para ayudarlo.
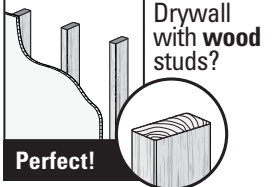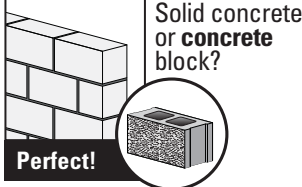
# IMPORTANT SAFETY INSTRUCTIONS – SAVE THESE INSTRUCTIONS – PLEASE READ ENTIRE MANUAL PRIOR TO USE

Before getting started, let's make sure this mount is perfect for you!

Para Español ver página 26
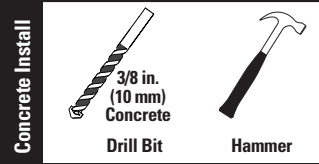
<p><b>1</b> Does your TV weigh (including accessories) <i>more</i> than 175 lbs. (79.3 kg)?</p>	 <p><b>No</b> — Perfect!</p> <p><b>Yes</b> — This mount is NOT compatible. Visit <a href="http://MountFinder.Sanus.com">MountFinder.Sanus.com</a> or call 1-800-359-5520 (UK: 0800-056-2853) to find a compatible mount.</p>
<p><b>2</b> What is your wall made of?</p>	<div style="display: flex; justify-content: space-between;"> <div data-bbox="381 281 576 468">  </div> <div data-bbox="609 281 885 468">  <p>Drywall with wood studs? <b>Perfect!</b></p> </div> <div data-bbox="909 281 1209 468">  <p>Solid concrete or concrete block? <b>Perfect!</b></p> </div> <div data-bbox="1242 281 1559 468">  <p>Unsure? <b>Call Customer Service:</b> 1-800-359-5520 (UK: 0800-056-2853)</p> </div> </div>
<p><b>3</b> Do you have all the tools needed?</p>	<div style="display: flex; justify-content: space-around; align-items: flex-end;"> <div data-bbox="381 489 479 654">  Tape Measure         </div> <div data-bbox="495 489 576 654">  Pencil         </div> <div data-bbox="592 489 690 654">  Screwdriver         </div> <div data-bbox="706 489 836 654">  Electric Drill         </div> <div data-bbox="852 489 966 654">  1/2 in. (13 mm) Socket Wrench         </div> <div data-bbox="982 489 1209 654">  Wood Stud Install 7/32 in. (5.5 mm) Wood Drill Bit         </div> <div data-bbox="1226 489 1559 654">  Concrete Install 3/8 in. (10 mm) Concrete Drill Bit Hammer         </div> </div>
<p><b>4</b> Ready to begin?</p>	<p>Please read through these instructions completely to be sure you're comfortable with this easy install process. Also check your TV owner's manual to see if there are any special requirements for mounting your TV.</p> <p>If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, contact Customer Service at 1-800-359-5520 (UK: 0800-056-2853).</p> <p><b>⚠ CAUTION:</b> Avoid potential personal injuries and property damage!</p> <ul style="list-style-type: none"> <li>• This product includes directions and hardware for use with wood stud, solid concrete and concrete block walls – DO NOT install into drywall alone.</li> <li>• The wall must be capable of supporting five times the weight of the TV and mount combined.</li> <li>• Do not use this product for any purpose not explicitly specified by manufacturer.</li> <li>• Manufacturer is not responsible for damage or injury caused by incorrect assembly or use.</li> </ul>

# STEP 1


# Attach Brackets to TV

## Parts and Hardware for STEP 1


**⚠ WARNING:** This product contains small items that could be a choking hazard if swallowed.

Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!


**📄 NOTE:** Not all hardware included will be used.

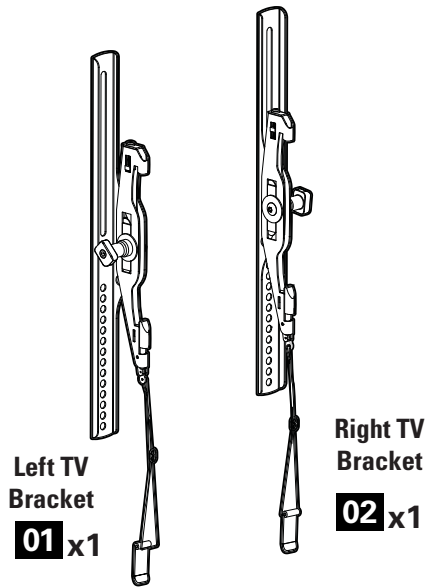


### TV Screws

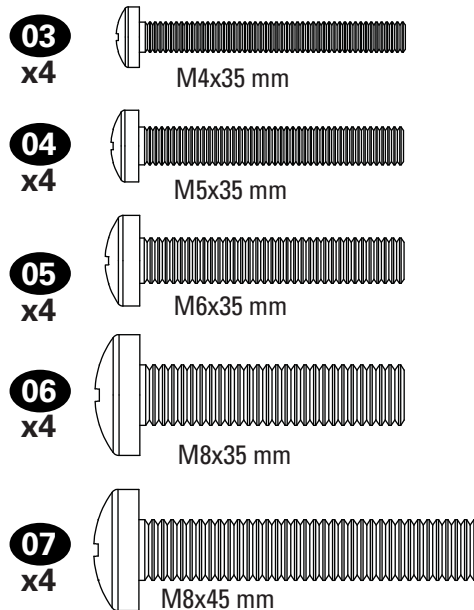

### TV Washers

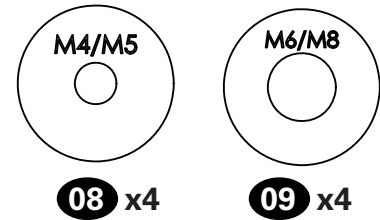


### Spacers

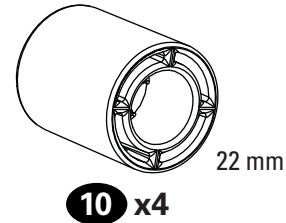


## 1.1 Select TV Screws

Hand thread screws into the threaded inserts on the back of your TV to determine which screw diameter (M4, M5, M6, or M8) to use.

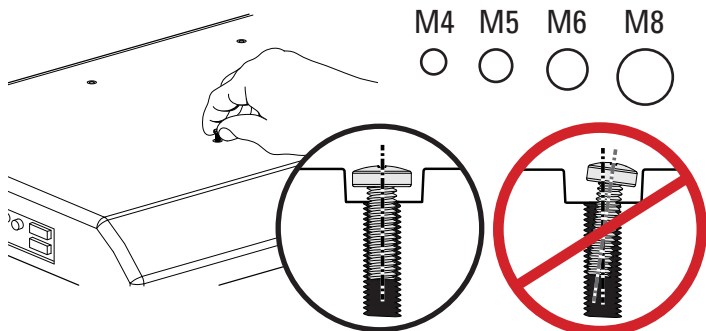

**⚠ CAUTION:** Verify adequate thread engagement of the screw/washer/spacer combination on your TV.


Too short will not hold the TV and too long will damage the TV.

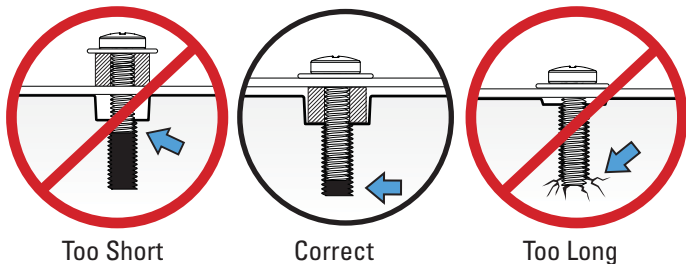


## 1.2 Spacers

Spacers and screws are supplied to install your TV bracket.


Determine your preference for spacer configuration when attaching your TV bracket.

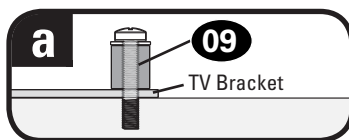


Mount the spacers **09** above the TV bracket, for flat back panels (AND the TV closer to the wall).

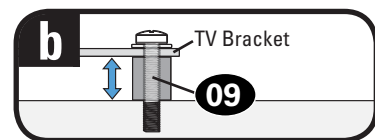

Mount the spacers **09** under the TV bracket to create extra space needed for irregular shape TV backs or large cables.

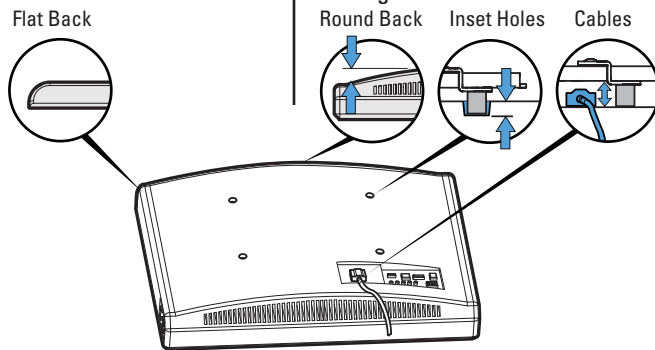

**?** If your TV included inset spacers or wall mount adapters, see Troubleshooting on PAGE 24.





## 1.3 Attach TV Brackets



Center the TV brackets **01** and **02** over your TV hole pattern as shown - making sure the brackets are level.

 **NOTE:** The tilt tension knob **(T)** on TV brackets **01** and **02** should be oriented to the outside edges.

Install using the spacer, TV screw and washer combination you selected for your TV.


 **CAUTION:** Avoid potential personal injuries and property damage! **DO NOT** use a power screwdriver for this step. Tighten screws only until TV Bracket is secured in place. **DO NOT** overtighten M4 screws **03**.

 **IMPORTANT:** For ease of access, straps should be level with the bottom of the TV.

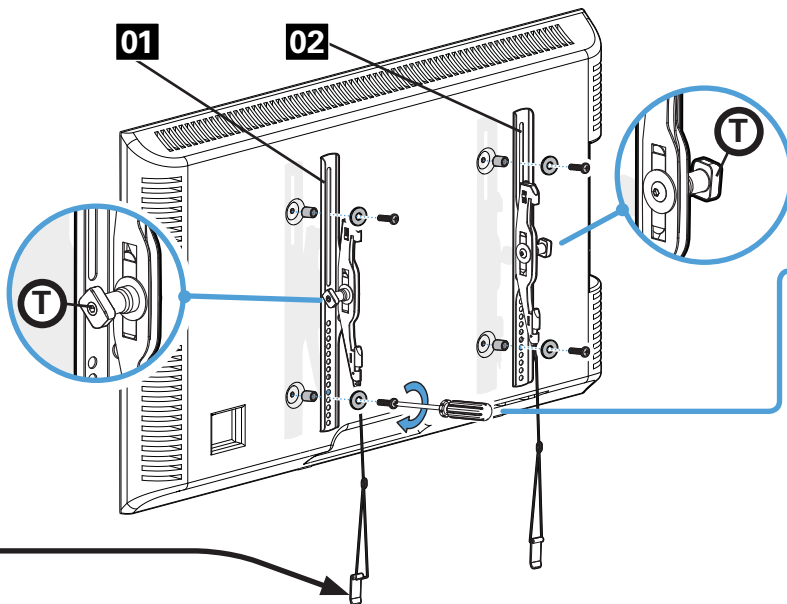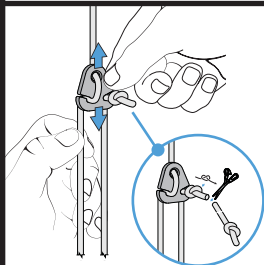


Standard configurations are shown. For special applications, or if you are uncertain about your hardware selection, contact Customer Service at 1-800-359-5520.

### a Spacer, screw and washer

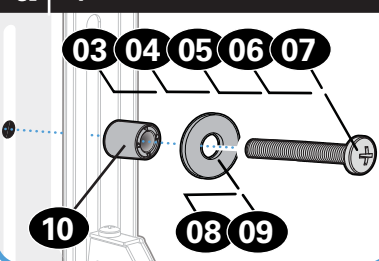

### b Spacer, screw and washer

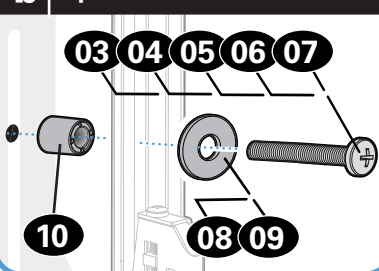

# STEP 2A




# Attach Wall Plate to Wall

## Parts and Hardware for STEP 2

**⚠ WARNING:** This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; contact Customer Service. Never use damaged parts!

**\* ⚠ WARNING:** This product contains a magnet. If an implanted medical device such as a pacemaker or implantable cardioverter defibrillator (ICD) is in use, magnetic fields may affect the operation of those devices, resulting in serious injury or death. If you have an implanted medical device, keep at least 13 cm (5 in.) between your device and the magnet. Please consult with your physician or medical professional prior to using this product.

**📄 NOTE:** Not all hardware included will be used.

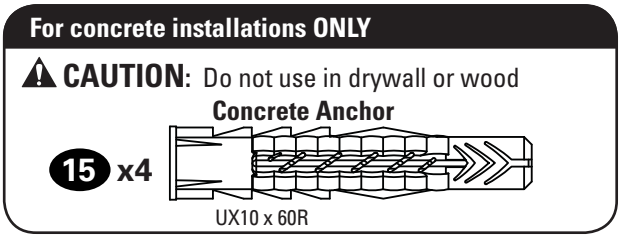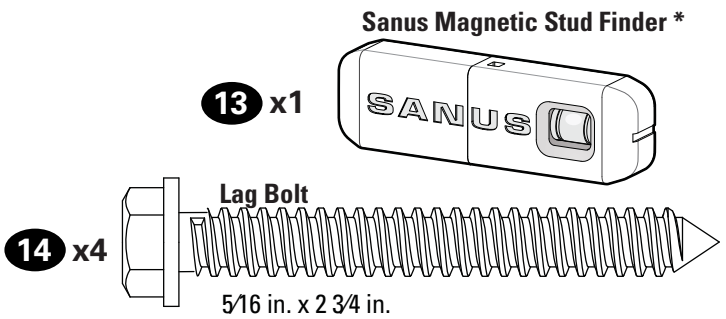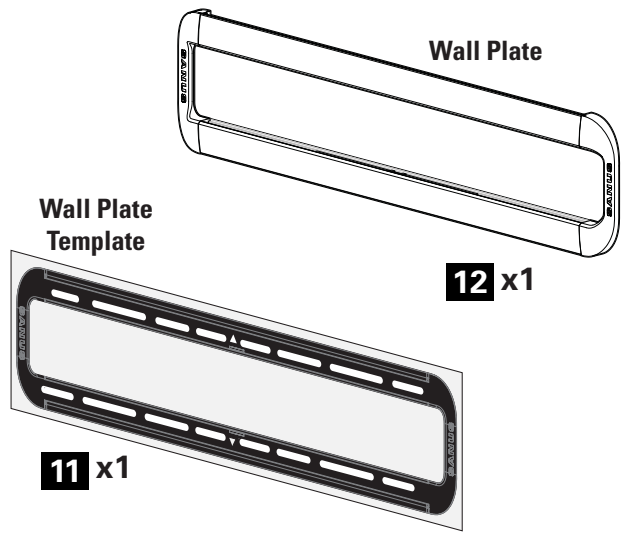




## STEP 2A






## Wood Stud Option

**CAUTION:** Avoid potential personal injuries and property damage!

- Drywall covering the wall must not exceed 5/8 in. (16 mm)
- Minimum wood stud size:  
common 2 x 4 in. (51 x 102 mm)  
nominal 1½ x 3½ in. (38 x 89 mm)
- Minimum horizontal space between fasteners: 16 in. (406 mm)
- Stud centers must be verified – not all walls have conventional 16 in. (406 mm) or 24 in. (610 mm) stud spacing

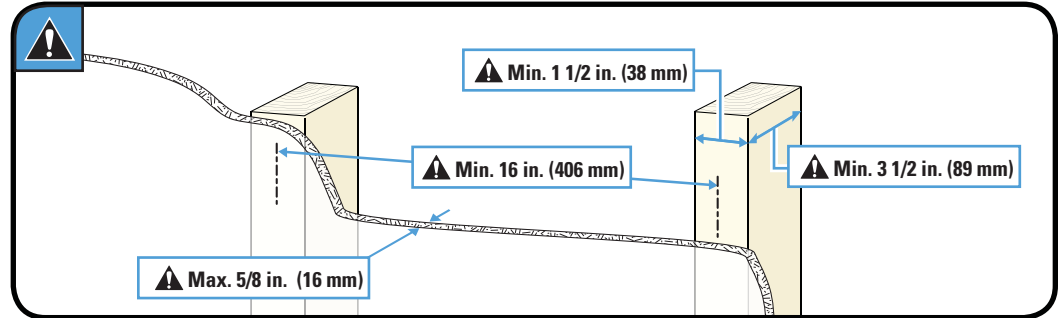

1. Locate a nail/screw in the studs using the Sanus magnetic stud finder **13** provided.
2. Find the edges of the studs using the probe of the stud finder **13**.
3. Mark the centers of the studs with a pencil.

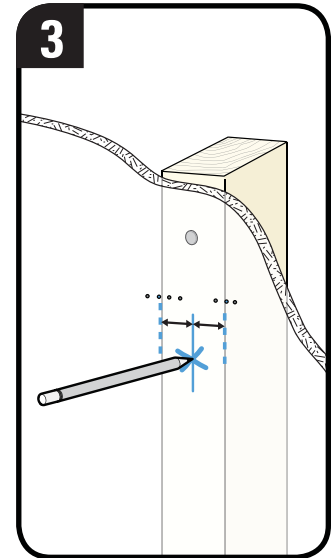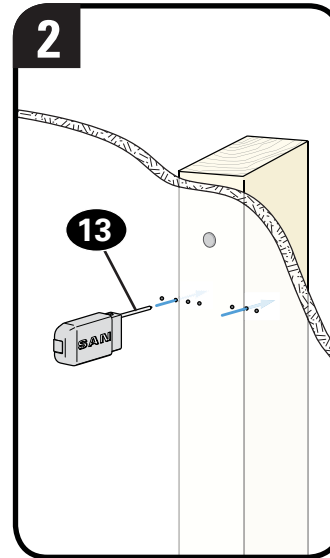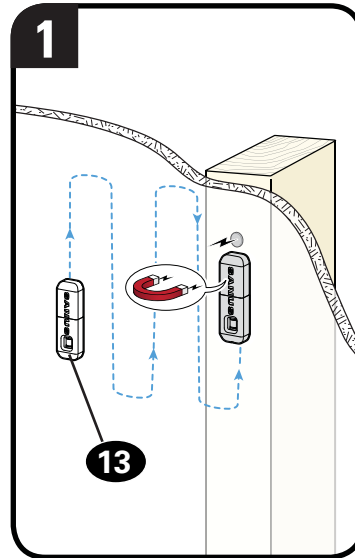


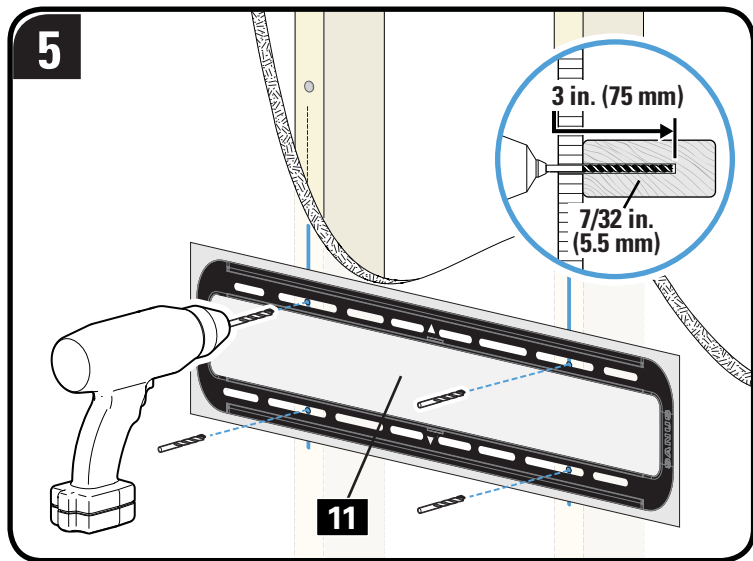
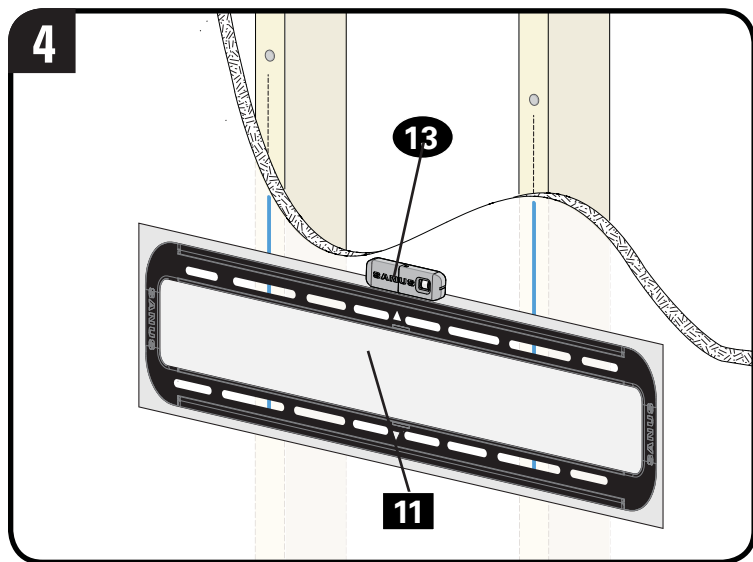
- Place the wall plate template **11** at your desired height and position the slotted holes over your stud center lines. Level the wall plate template **11** and tape in place.

 **NOTE:** For assistance in determining wall plate location, see HeightFinder at sanus.com.



 **IMPORTANT:** Be sure you mark and drill into the center of the stud.

- Drill the four pilot holes using a 7/32 in. (5.5 mm) diameter drill bit.

 **IMPORTANT:** Pilot holes must be drilled to a depth of 3 in. (75 mm).




6. Remove the wall plate template **11**.
7. Slide the covers **C** open on the wall plate **12** to expose the mounting holes.

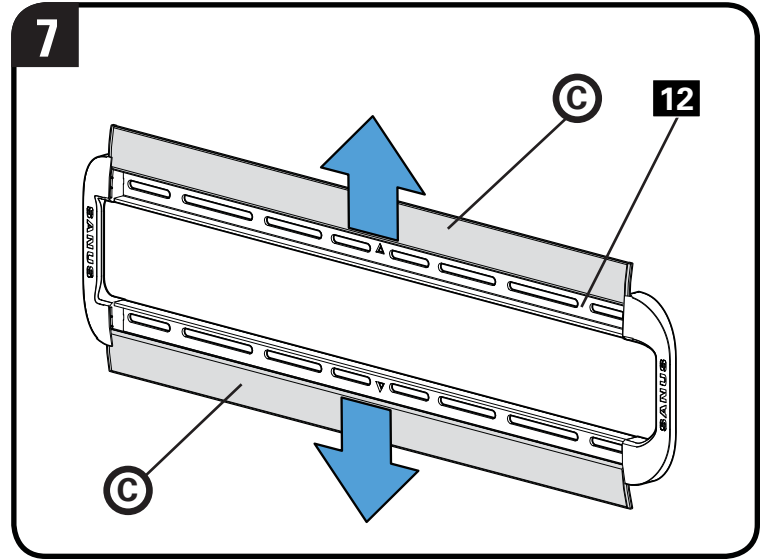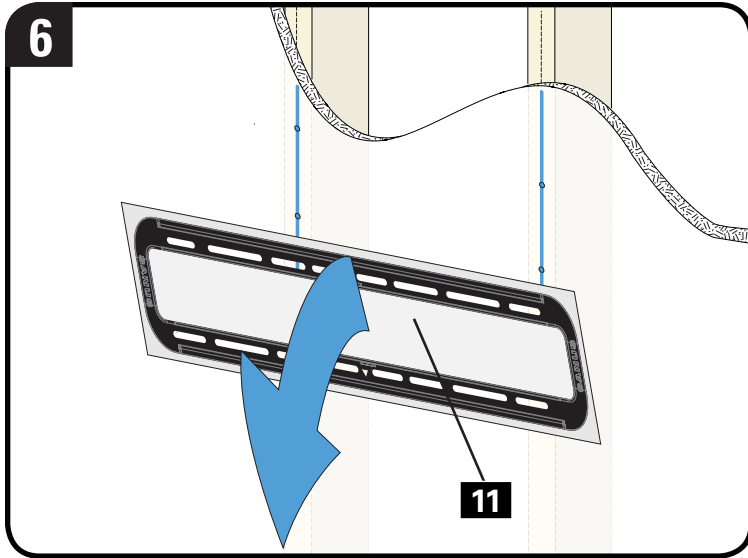



8. Install the wall plate **12** using four lag bolts **14**. Firmly tighten all four lag bolts **14** until they are pulled flush against the wall plate **12**.

 **NOTE:** Hold the wall plate **12** in place when tightening the first lag bolt **14** to keep the plate from shifting out of place.


 **CAUTION:** Avoid potential personal injury or property damage! All four lag bolts **14** MUST BE firmly tightened to prevent unwanted movement of the wall plate **12**. Ensure the wall plate is securely fastened to the wall before continuing on to the next step.

9. Slide the covers **C** closed on wall plate **12**.

Go to STEP 3 on PAGE 16.

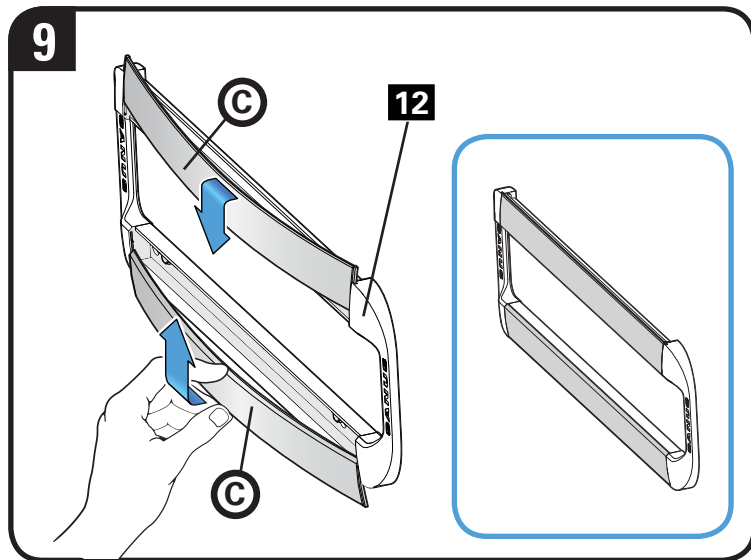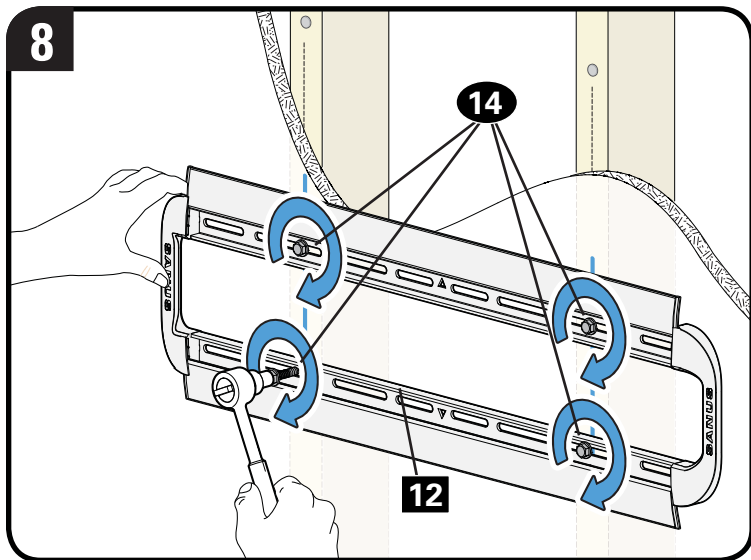

## STEP 2B




## Solid Concrete or Concrete Block Option

**⚠ CAUTION:** Avoid potential personal injuries and property damage!



- Mount the wall plate **12** directly onto the concrete surface
- Minimum solid concrete thickness: 8 in. (203 mm)
- Minimum concrete block size: 8 x 8 x 16 in. (203 x 203 x 406 mm)
- Minimum horizontal space between fasteners: 24 in. (610 mm)

1. Position the wall plate template **11** on the wall at your desired height. Level the wall plate template and mark the hole locations.

 **NOTE:** For assistance in determining wall plate location, see Height Finder at [sanus.com](http://sanus.com).

2. Drill four pilot holes using a 3/8 in. (10 mm) diameter drill bit.



**! IMPORTANT:** Pilot holes must be drilled to a depth of 3 in. (75 mm). Never drill into the mortar between blocks.

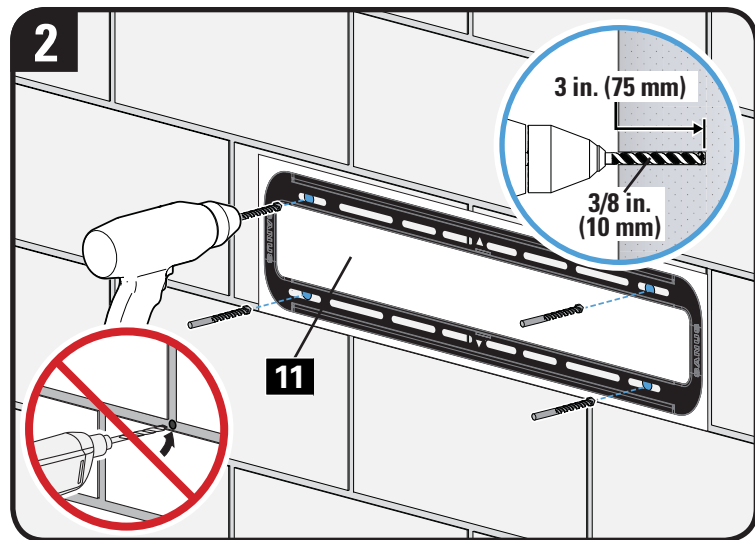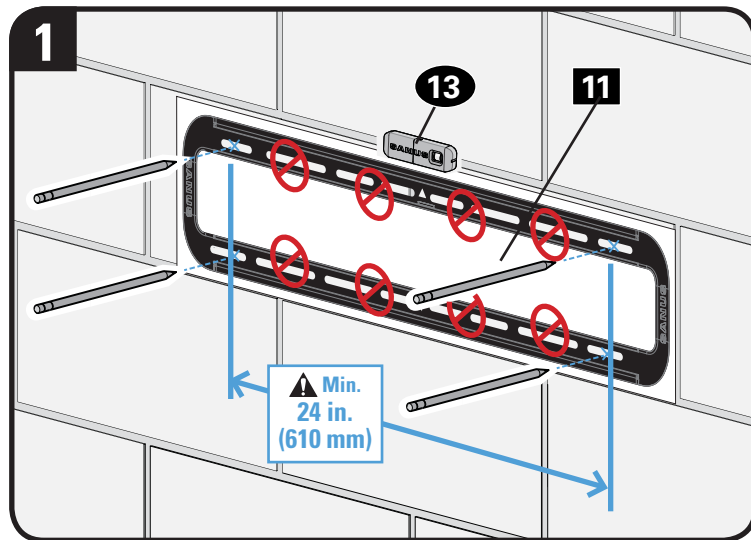


3. Remove the wall plate template **11** and insert four anchors **15**.


**⚠ CAUTION:** Be sure the anchors **15** are seated flush with the concrete surface.

4. Slide the covers **C** open on the wall plate **12** to expose the mounting holes.

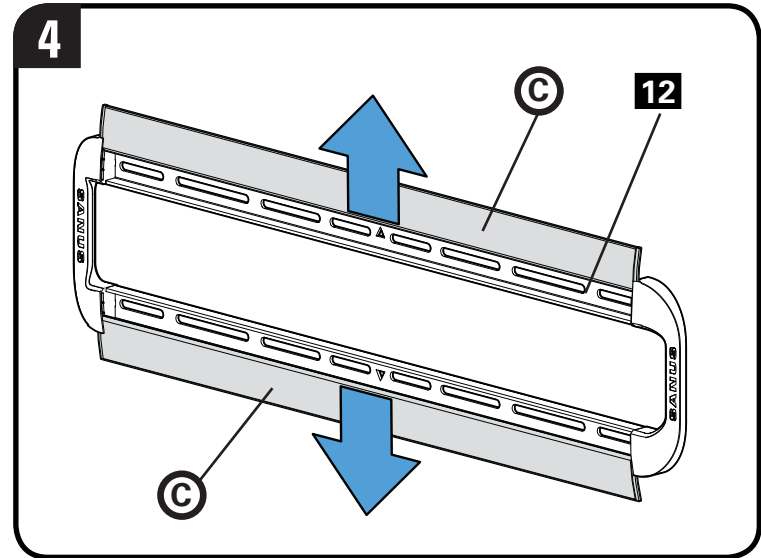
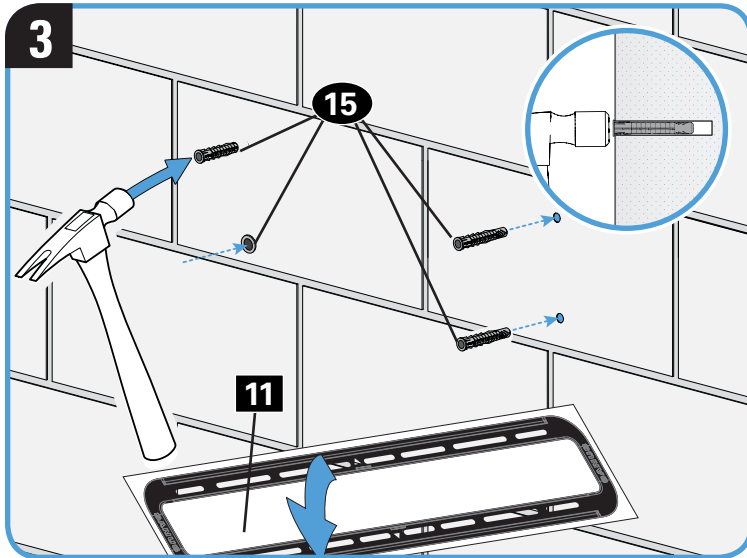


5. Install the wall plate **12** using four lag bolts **14**. Firmly tighten all four lag bolts **14** until they are pulled flush against the wall plate **12**.

 **NOTE:** Hold the wall plate **12** in place when tightening the first lag bolt **14** to keep the plate from shifting out of place.

 **CAUTION:** Avoid potential personal injury or property damage! All four lag bolts **14** MUST BE firmly tightened to prevent unwanted movement of the wall plate **12**. Ensure the wall plate is securely fastened to the wall before continuing on to the next step.

6. Slide the covers **C** closed on wall plate **12**.

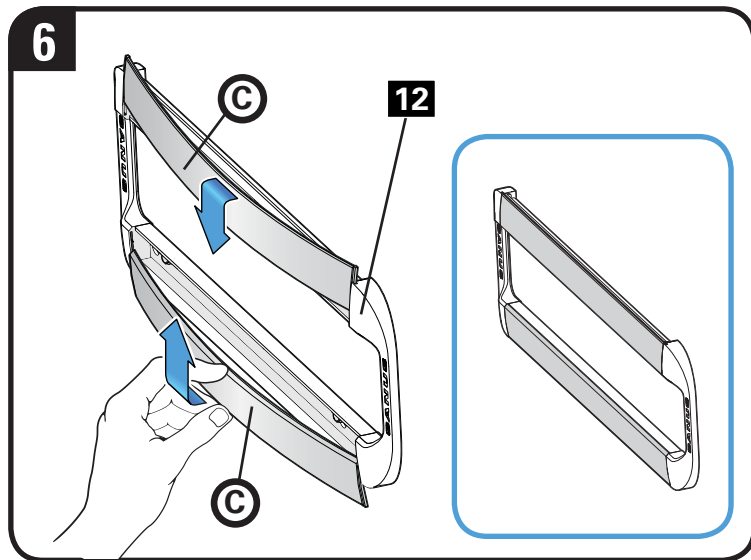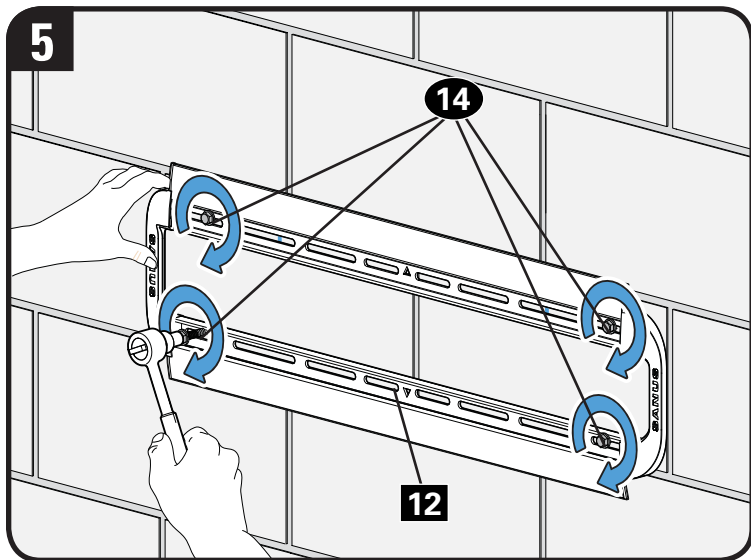


# STEP 3

## Attach TV to Wall Plate




**HEAVY!** You may need assistance with this step.

1. Hook the TV brackets **01** and **02** onto the wall plate **12**.

 **NOTE:** The TV brackets **01** and **02** can be slid anywhere along the wall plate **12** for optimal positioning of your TV.

2. Rest the TV into place against the wall.
3. Press the bottom of the TV into the wall plate **12** until the latches lock the TV in place.

**⚠ CAUTION:** Avoid potential personal injury or property damage! Always make sure your TV brackets are in the locked position so the TV is securely fastened to the wall plate **12**.

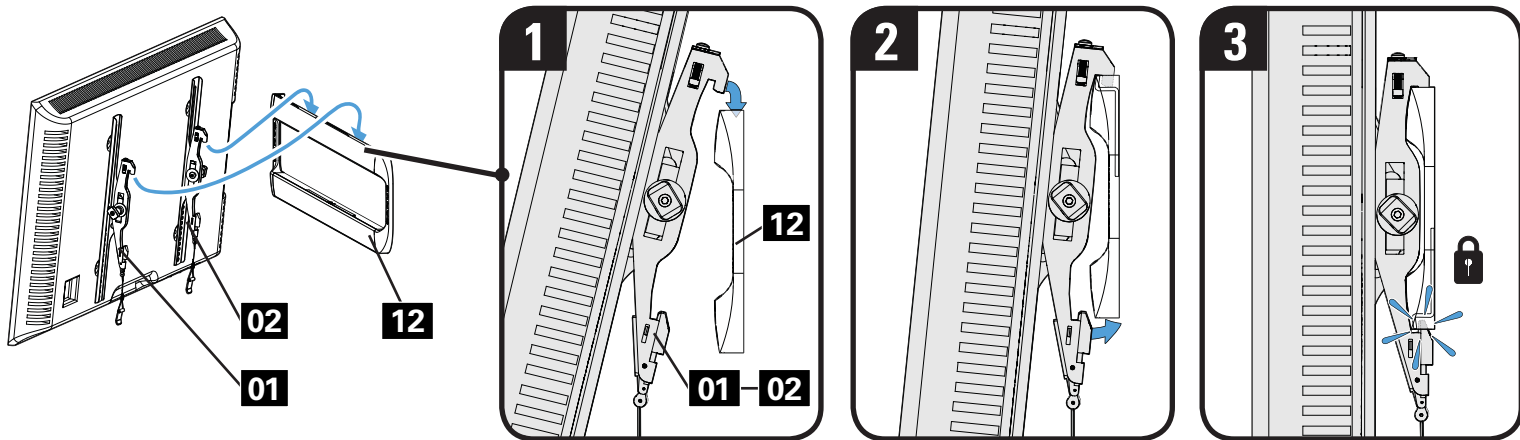





# Manage Cables

Tilt the TV up or down to gain access to the back of the TV.

Attach your cables, then adjust the TV as desired.


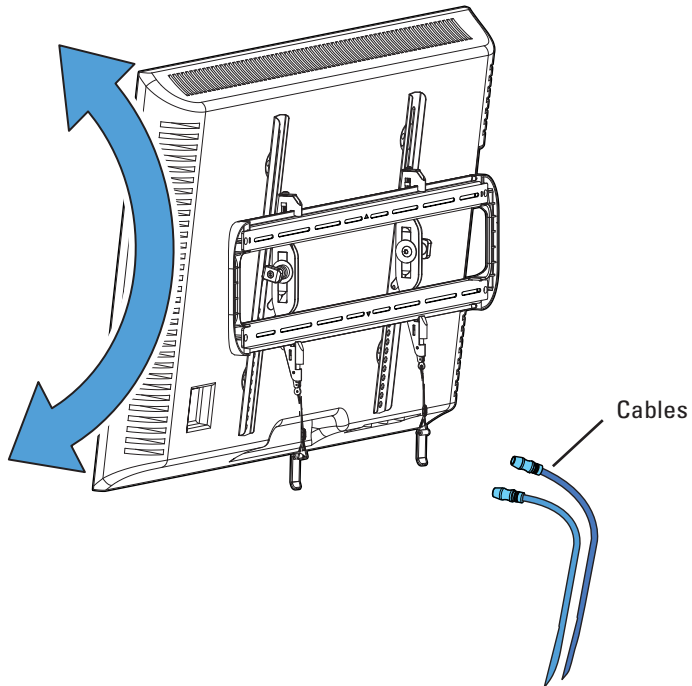


# Adjustments

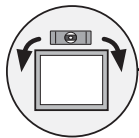

## LEVEL

To level your TV, turn the level adjustment screw **(S)** on the top of either TV bracket **01** or **02** to raise or lower that respective side of the TV.

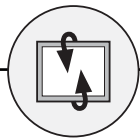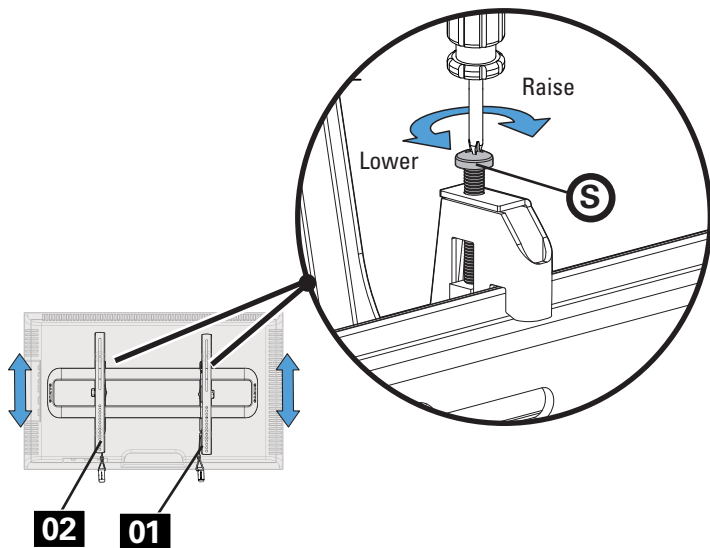



## Tilt

Your TV should adjust easily when moved, then stay in place.

Adjust the tilt tension knob **(T)** if your TV naturally tilts up or down.

**NOTE:** If you do not intend to adjust the tilt for different viewing locations, you can tighten the tilt tension knobs **(T)** to prevent unwanted movement.

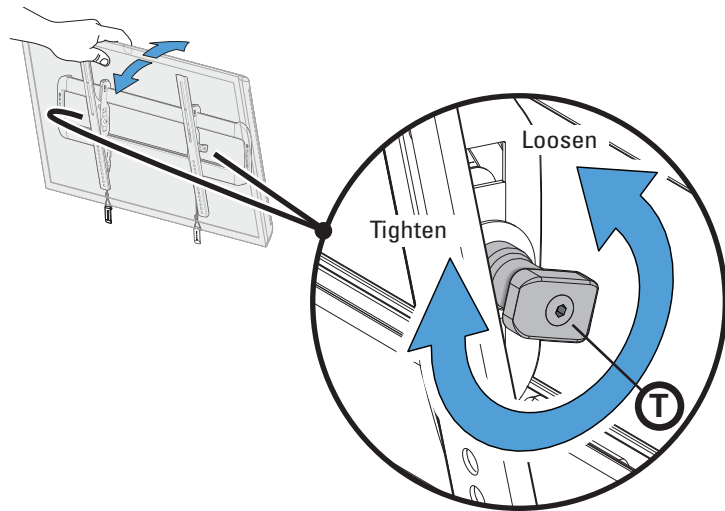


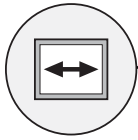


## TV LATERAL SHIFT



**HEAVY!** You may need assistance with this step.

Slide the TV left or right along the wall plate **12** to reposition.

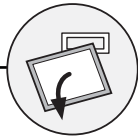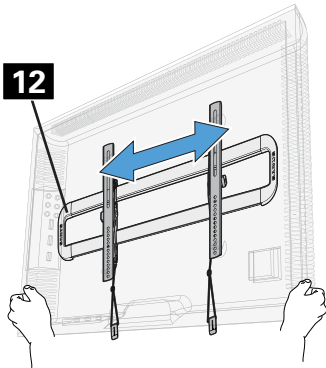

## REMOVING THE TV






**HEAVY!** You may need assistance with this step.

1. Disconnect all cables from the TV.
2. To unlock the TV from the wall plate: Pull down and hold both release cords **(R)** while gently pulling the bottom of the TV away from the wall.


**⚠ CAUTION:** Avoid potential personal injury or property damage! To prevent breaking the locking latch: always pull and hold the release cords **(R)** down while pulling the TV away from the wall.

3. Lift the TV up and off of wall plate **12**.

**📄 NOTE:** To rehang the TV, follow the procedures in STEP 3 on PAGE 16.

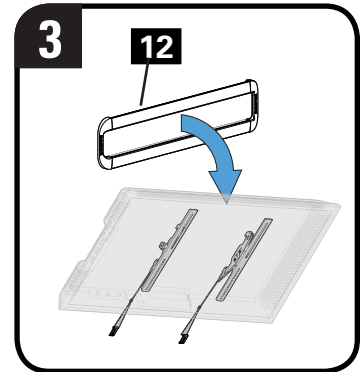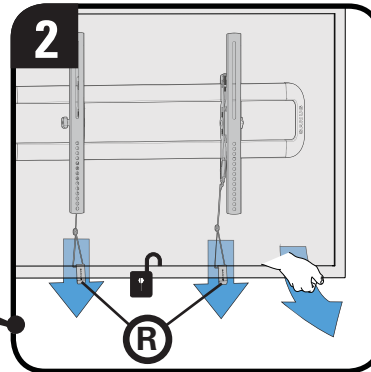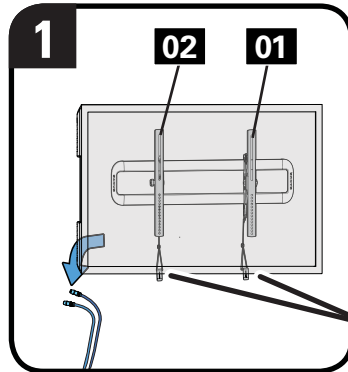


## TV supplied spacers




TV Supplied Spacers

**a:** Use your TV supplied spacer for flat back TVs (AND you want your TV closer to the wall).

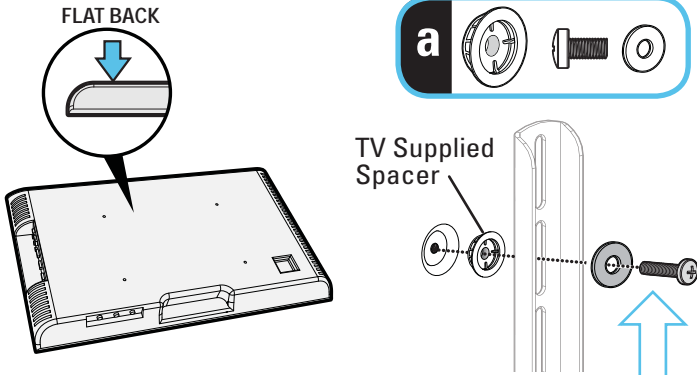

**CAUTION:** Avoid potential injury or property damage! Use the correct screw length for adequate thread engagement.


- Too short will not hold the TV.
- Too long will damage the TV.

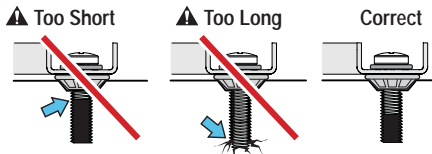

If you are uncertain about your hardware selection, contact Customer Service at 1-800-359-5520.


**b:** Use your TV supplied spacer and spacer **10** for:

- Round (irregular) back TVs
- Extra space needed for cables

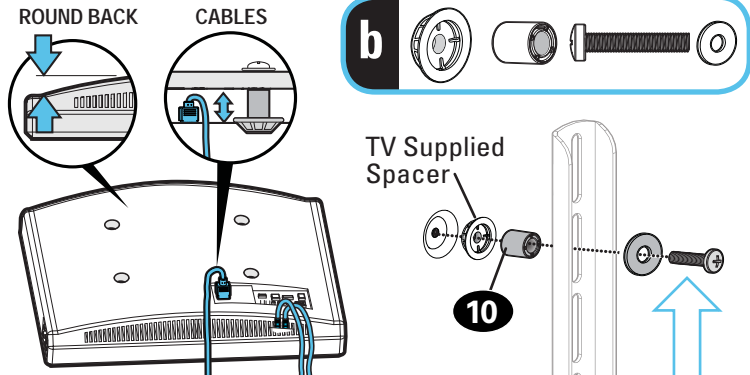


**CAUTION:** Avoid potential injury or property damage! Use the correct screw length for adequate thread engagement.

- Too short will not hold the TV.
- Too long will damage the TV.

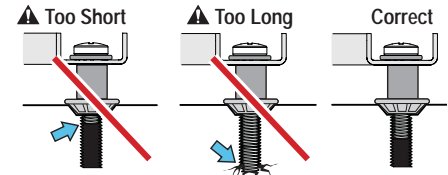


# Features

TV bracket expands to fit TV hole patterns from 200 x 200 mm up to 700 x 400 mm

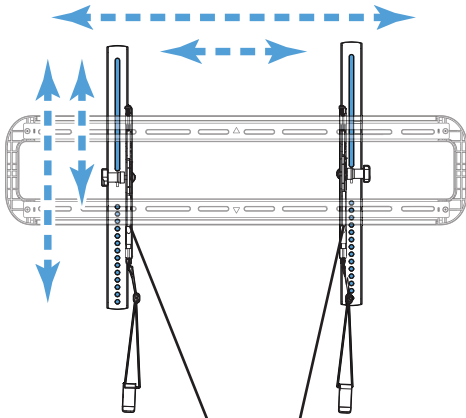


Locking mechanisms for added security

Brackets adjust side to side within the wall plate for optimal positioning

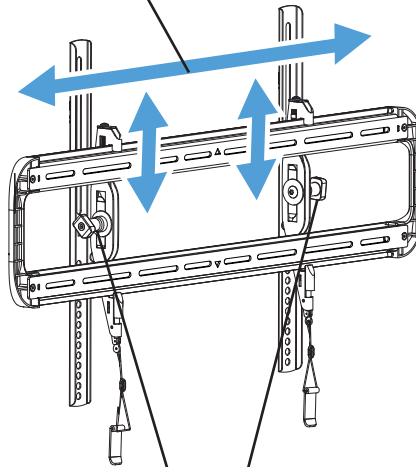

Level adjustments create a worry-free installation

TV tilts up or down for the perfect viewing angle


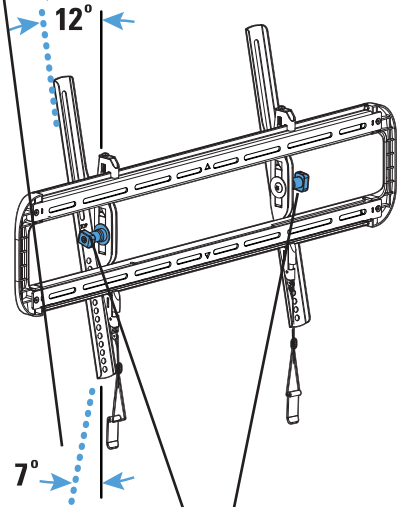


Adjustment knobs allow fingertip control of TV or to restrict TV movement

# Dimensions


in. [mm]

## TV INTERFACE

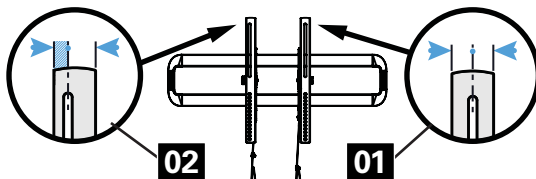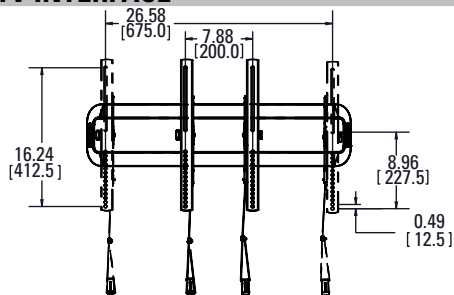


**NOTE:** The offset hole pattern on right TV bracket **02** is designed to accommodate a better range of TV hole patterns, while allowing proper engagement with the wall plate.

## 3-D

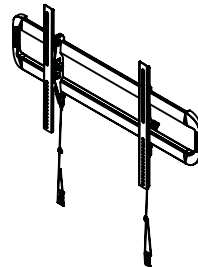

## WALL PLATE

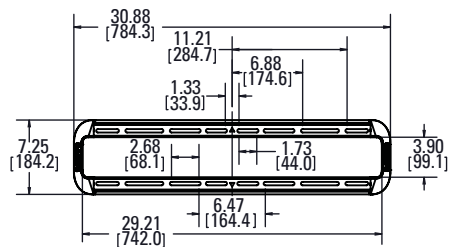


## TOP VIEW - EXTENDED



## SIDE VIEW - EXTENDED



## FULLY ASSEMBLED MOUNT

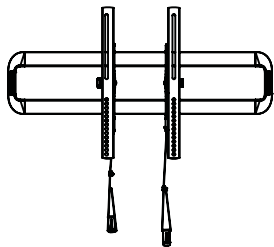

## TOP VIEW - RETRACTED



## SIDE VIEW - RETRACTED





Antes de comenzar, verifiquemos que este soporte sea el ideal para sus necesidades.


**1** ¿Su televisor pesa más de 79,3 kg (175 lb), incluidos los accesorios?




No — ¡Perfecto!

Sí — Este soporte NO es compatible. Visite [MountFinder.Sanus.com](http://MountFinder.Sanus.com) o llame al 1-800-359-5520 (Reino Unido: 0800-056-2853) para encontrar un soporte compatible.

**2** ¿De qué está hecha su pared?

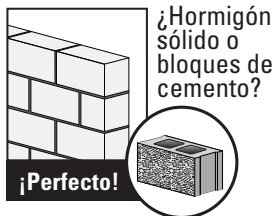

**3** ¿Tiene todas las herramientas necesarias?



Cinta métrica



Lápiz



Destornillador



Taladro eléctrico



13 mm (1/2")  
Llave de tubo

Paredes con montantes de madera



5,5 mm (7/32")  
Madera  
Broca

Paredes con de hormigón



10 mm (3/8")  
Hormigón  
Broca



Martillo

**4** ¿Listo para comenzar?

Lea estas instrucciones en su totalidad para estar seguro de sentirse cómodo con este fácil proceso de instalación. Consulte también el manual del usuario de su televisor para ver si existe algún requisito especial para instalar su televisor en la pared. Si no entiende las instrucciones o si tiene dudas acerca de la seguridad de la instalación, del ensamblado o del uso del producto, póngase en contacto con el servicio de atención al cliente al 1-800-359-5520 (Reino Unido: 0800-056-2853).

**⚠PRECAUCIÓN:** Evite posibles lesiones personales y daños materiales.

- Este producto incluye instrucciones y elementos de sujeción para su instalación en paredes con montantes de madera, en superficies de hormigón y sobre bloques de cemento. NO lo instale en tabiques únicamente de yeso.
- La pared debe soportar cinco veces el peso del televisor y del soporte juntos.
- No utilice este producto para ningún otro propósito que no sea el explícitamente especificado por el fabricante.
- El fabricante no se responsabiliza por ningún daño o lesión resultante del montaje incorrecto o de uso indebido.



## PASO 1

# Colocar las placas de sujeción en el televisor

### Piezas y elementos de sujeción para el PASO 1

**⚠ ADVERTENCIA:** Este producto contiene piezas pequeñas que, si fuesen tragadas, podrían producir asfixia.

Antes de iniciar el ensamblaje, compruebe que todas las piezas estén incluidas y en buenas condiciones. Si faltan piezas o alguna está dañada, no devuelva el artículo al distribuidor; póngase en contacto con el servicio de atención al cliente. Nunca utilice piezas deterioradas.

### 1,1 Seleccionar los tornillos del televisor

Enrosque manualmente los tornillos en los encastres roscados del dorso del televisor a fin de determinar qué diámetro de tornillos (M4, M5, M6 o M8) utilizar.

**⚠ PRECAUCIÓN:** Verifique que la combinación de tornillo y separador enrosque correctamente en su televisor.

Si el tornillo es demasiado corto, el televisor no se sostendrá; si es demasiado largo, dañará el televisor.

### 1,2 Separadores

Los separadores y tornillos se proporcionan para instalar la placa de sujeción de su televisor.


Determine cuál es su preferencia para la configuración de los separadores al fijar la placa de sujeción de su televisor.

Instale los separadores **09** encima de la placa de sujeción de su televisor, de modo que la placa de sujeción quede cerca de la superficie del televisor para los paneles planos posteriores.

Instale los separadores **09** debajo de la placa de sujeción del televisor para crear más espacio para los televisores con forma irregular en la parte posterior o cables extensos.

### 1,3 Fijar las placas de sujeción del televisor

Centre las placas de sujeción **01** y **02** sobre el patrón de orificios del televisor, como se muestra. Asegúrese de que las placas de sujeción estén niveladas.

 **NOTA:** Las perillas de tensión de inclinación **T** de las placas de sujeción del televisor **01** y **02** deben orientarse hacia los bordes externos. Coloque la combinación de separador, tornillo y arandela que seleccionó para su televisor.

**ⓘ IMPORTANTE:** Para facilitar el acceso, las correas deben estar niveladas con la parte inferior del televisor.

**⚠ PRECAUCIÓN:** Evite posibles lesiones físicas y daños materiales. NO utilice un destornillador eléctrico para este paso. Apriete los tornillos sólo hasta el soporte de la TV se fija en su lugar. No apriete demasiado los tornillos M4 **03**.

Se ilustran las configuraciones estándar. Si desea información sobre aplicaciones especiales o si tiene dudas sobre la elección de los elementos de fijación, contáctese con el servicio de atención al cliente. 1-800-359-5520 (Reino Unido: 0800-056-2853)

### Piezas y elementos de sujeción para el PASO 2

**⚠ ADVERTENCIA:** Este producto contiene piezas pequeñas que, si fuesen tragadas, podrían producir asfixia. Antes de iniciar el ensamblaje, compruebe que todas las piezas estén incluidas y en buenas condiciones. Si faltan piezas o alguna está dañada, no devuelva el artículo al distribuidor; póngase en contacto con el servicio de atención al cliente. Nunca utilice piezas deterioradas.

\* **⚠ ADVERTENCIA:** Este producto contiene un imán. Si utiliza un dispositivo médico implantado como un marcapasos o un desfibrilador automático implantable (DAI), los campos magnéticos pueden afectar el funcionamiento de esos dispositivos y causar heridas de gravedad o la muerte. Si tiene un dispositivo médico implantado, mantenga una distancia de al menos 13 cm (5 pulgadas) entre su dispositivo y el imán. Consulte a su médico antes de utilizar este producto.

**📄 NOTA:** No todos los accesorios incluidos deberán utilizarse.

SOLO para instalaciones en hormigón

**⚠ PRECAUCIÓN:** No usar en placas de yeso o montantes de madera

15 x4





## PASO 2A Opción para montantes de madera

**⚠ PRECAUCIÓN:** Evite lesiones y daños materiales.

- El yeso que recubre la pared no debe exceder los 16 mm (5/8").
- Tamaño mínimo del montante de madera: común 51 mm x 102 mm (2" x 4") (nominal 38 mm x 89 mm (1 1/2" x 3 1/2").
- Espacio horizontal mínimo entre los elementos de sujeción: 406 mm (16 pulgadas)
- Se deben verificar las partes centrales de los pernos, no todas las paredes tienen una separación convencional de 406 mm (16") o 610 mm (24")

1. Encuentre un clavo/tornillo en los montantes con el detector magnético de bordes de montantes Sanus **13** incluido.
2. Encuentre los bordes de los montantes con el detector magnético de bordes de montantes **13**.
3. Marque los centros de los montantes con un lápiz.
4. Coloque la plantilla de placa mural **11** a la altura que desee y posicione los orificios en forma de ranura sobre las líneas centrales del montante. Nivele la plantilla de la placa mural **11** y fíjela con cinta adhesiva en el lugar.

 **NOTA:** Si necesita ayuda para determinar la ubicación de la placa mural, utilice la herramienta HeightFinder disponible en sanus.com.

 **IMPORTANTE:** Asegúrese de marcar y perforar el centro del montante.


5. Haga los cuatro orificios guía con una mecha de 5,5 mm (7/32") de diámetro.


 **IMPORTANTE:** Los orificios guía deben realizarse hasta una profundidad de 75 mm (3").

6. Retire la plantilla de la placa mural **11**.

7. Deslice las cubiertas **C** abiertas sobre la placa mural **12** para que los orificios de montaje queden expuestos.

8. Instale la placa mural **12** usando cuatro tornillos tirafondo **14**. Apriete los cuatro tornillos tirafondo **14** hasta que estén nivelados en la placa mural **12**.

 **NOTA:** Sostenga la placa mural **12** en su lugar mientras ajusta el primer perno **14** para evitar que se mueva fuera de su sitio.

 **PRECAUCIÓN:** Evite posibles lesiones personales y daños materiales. Los cuatro tornillos tirafondo **14** DEBEN ESTAR apretados firmemente para evitar que la placa mural se desplace **12**. Asegúrese de que la placa mural está fijada con seguridad a la pared antes de proceder con el siguiente paso.

9. Deslice las cubiertas **C** cerradas sobre la placa mural **12**.

Continúe con el PASO 3 en la PÁGINA 16.

## PASO 2B Opción para hormigón sólido o bloques de cemento

**⚠ PRECAUCIÓN:** Evite lesiones y daños materiales.

- Instale la placa mural **12** directamente sobre la superficie de hormigón.
- Espesor mínimo del hormigón: 203 mm (8")
- Tamaño mínimo del bloque de cemento: 203 x 203 x 406 mm (8" x 8" x 16")
- Espacio horizontal mínimo entre los elementos de sujeción: 610 mm (24")

1. Coloque la plantilla de la placa mural **11** en la pared a la altura que desee. Nivele la plantilla de la placa mural y marque la ubicación de los orificios.

 **NOTA:** Si necesita ayuda para determinar la ubicación de la placa mural, utilice la herramienta HeightFinder disponible en sanus.com.

2. Haga los cuatro orificios guía con una mecha de 10 mm (3/8") de diámetro.


**! IMPORTANTE:** Los orificios guía deben realizarse hasta una profundidad de 75 mm (3"). Nunca perfora el cemento que une los bloques.

3. Retire la plantilla de la placa mural **11** e inserte cuatro anclajes **15**.

**⚠ PRECAUCIÓN:** Cerciórese de que los anclajes **15** queden nivelados respecto de la superficie de hormigón.

4. Deslice las cubiertas **C** abiertas sobre la placa mural **12** para que los orificios de montaje queden expuestos.

5. Instale la placa mural **12** usando cuatro tornillos tirafondo **14**. Apriete los cuatro tornillos tirafondo **14** hasta que estén nivelados en la placa mural **12**.

 **NOTA:** Sostenga la placa mural **12** en su lugar mientras ajusta el primer perno **14** para evitar que se mueva fuera de su sitio.

**⚠ PRECAUCIÓN:** Evite posibles lesiones personales y daños materiales. Los cuatro tornillos tirafondo **14** DEBEN ESTAR apretados firmemente para evitar que la placa mural se desplace **12**. Asegúrese de que la placa mural está fijada con seguridad a la pared antes de proceder con el siguiente paso.

6. Deslice las cubiertas **C** cerradas sobre la placa mural **12**.

## PASO 3

## Fijar el televisor a la placa mural

Ver página 16



**¡ELEMENTO PESADO!** Es posible que necesite ayuda en este paso.

1. Cuelgue las placas de sujeción **01** y **02** en la placa mural **12**.

 **NOTA:** Las placas de sujeción del televisor **01** y **02** se pueden deslizar hacia cualquier parte junto con la placa mural **12** para lograr un posicionamiento óptimo de su televisor.

2. Apoye el televisor en su lugar contra la pared.

3. Presione la parte inferior del televisor en la placa mural **12** hasta que las placas de sujeción fijen el televisor en su lugar.

**▲ PRECAUCIÓN:** Evite el riesgo de lesiones y daños materiales. Siempre asegúrese de que las placas de sujeción del televisor estén en la posición bloqueada para que el televisor quede bien sujeto a la placa mural **12**.

## Organizar los cables

Ver página 17

Incline el televisor hacia arriba o hacia abajo para poder acceder a su parte posterior. Conecte los cables y luego ajuste el televisor según lo desee.

## Nivel

---


Para nivelar su televisor, gire el tornillo de ajuste de nivel **(S)** en la parte superior de alguna de las placas de sujeción **01** o **02** para levantar o bajar el lado respectivo del televisor.

## Inclinación

---

El televisor debe acomodarse fácilmente al moverlo y luego quedar en su lugar.

Si su televisor se inclina naturalmente hacia arriba o hacia abajo, ajuste la perilla de tensión de inclinación **(T)**.

 **NOTA:** Si no tiene la intención de ajustar la inclinación para los diferentes puntos de visualización, puede ajustar la perilla de tensión de inclinación **(T)** para evitar movimientos indeseados.

## DESPLAZADOR LATERAL DEL TELEVISOR

---



**¡ELEMENTO PESADO!** Es posible que necesite ayuda en este paso.

Deslice el televisor hacia la izquierda o hacia la derecha junto con la placa mural **12** para cambiar su posición.

## EXTRACCIÓN DEL TELEVISOR

---



**¡ELEMENTO PESADO!** Es posible que necesite ayuda en este paso.

1. Desconecte todos los cables del televisor.
2. Para desbloquear el televisor de la placa mural: Jale hacia abajo y sostenga ambos cordones de desenganche **(R)** mientras tira con cuidado de la parte inferior del televisor para separarlo de la pared.


**▲ PRECAUCIÓN:** Evite el riesgo de lesiones y daños materiales. Para que el pasador de seguridad no se rompa, siempre jale y sostenga los cordones de desenganche **(R)** mientras retira el televisor de la pared.

3. Tire de la parte inferior del televisor desde la pared lo suficiente como para inclinar el televisor hacia arriba y fuera de la placa mural **12**.



**NOTA:** Para volver a colocar el televisor, siga el procedimiento del PASO 3 en la PÁGINA 16.

**Para televisores que incluyen separadores insertados o aros adaptadores para soportes murales.**



los separadores proporcionados con el televisor

Si tiene dudas sobre la elección de los elementos de fijación, contáctese con el servicio de atención al cliente. 1-800-359-5520 (Reino Unido: 0800-056-2853)

**a.** Use los separadores proporcionados con el televisor, si el dorso del televisor es plano (Y usted quiere que su TV más cerca de la pared).

**⚠ PRECAUCIÓN:** Verifique el enrosque adecuado del tornillo o del conjunto tornillo/separador.

— Si es demasiado corto, no sostendrá el televisor.

— Si es demasiado largo, dañará el televisor.

**b.** Use los separadores proporcionados con el televisor y los separadores Sanus **10** para:

- televisores con dorso irregular o redondeado
- dejar un espacio adicional para cables

**⚠ PRECAUCIÓN:** Verifique el enrosque adecuado del tornillo o del conjunto tornillo/separador.

— Si es demasiado corto, no sostendrá el televisor. — Si es demasiado largo, dañará el televisor.



## Descripción

[Ver página 21](#)

- La placa de sujeción se expande para adecuarse a televisores con patrones de orificios de 200 x 200 mm hasta 700 x 400 mm.
- Los mecanismos de bloqueo brindan una mayor seguridad.
- Las placas de sujeción pueden ajustarse de un lado al otro de la placa mural para lograr un posicionamiento óptimo.
- El ajuste del nivel crea una instalación sencilla.
- El televisor se inclina hacia arriba y hacia abajo para obtener el ángulo de visualización perfecto.
- Las perillas de ajuste permiten controlar o restringir el movimiento del televisor con las yemas de los dedos.

## Dimensiones

[Ver página 22](#)

 **NOTA:** El patrón descentrado de orificios en la sujeción de televisor derecho **02** está diseñado para acomodar una mayor variedad de patrones de orificios de televisor, a la vez que ofrece una fijación adecuada a la placa mural.

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions, or variations. Nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Milestone AV Technologies y sus empresas asociadas y filiales (colectivamente "Milestone") tienen la intención de que este manual sea preciso y completo. Sin embargo, Milestone no garantiza que la información que contiene incluya todos los detalles condiciones y variaciones, ni que contemple toda posible contingencia en conexión con la instalación y uso de este producto. La información contenida en este documento es susceptible de ser modificada sin aviso ni obligación de ningún tipo. Milestone no hace ninguna manifestación de garantía, explícita o implícita, respecto a la información contenida este documento. Milestone no asume ninguna responsabilidad por la exactitud, integridad o suficiencia de la información contenida en este documento.

# FOLLOW **SANUS** ON YOUR FAVORITE SOCIAL NETWORKS!

[FACEBOOK.COM/SANUSSYSTEMS](https://www.facebook.com/sanusystems)



Learn ways to get the most out of your space.  
Find product updates and more.

[TWITTER.COM/SANUSSYSTEMS](https://twitter.com/sanusystems)



Learn installation tips, tricks and household know-hows.

[YOUTUBE.COM/SANUSSYSTEMS](https://www.youtube.com/sanusystems)



View step-by-step product videos to ease your install experiences.  
Find the latest news stories about your favorite SANUS products.

# REGISTER YOUR NEW **SANUS** PRODUCT!

1

By registering, you'll be entered to win, and will receive the latest product updates, design tips, and other ways to enhance your life in your home.

2

Visit **SANUS.com/register** to complete your registration and start enjoying all of the benefits SANUS has to offer.

3

Leave a product review and let us know how your install went!



If you ever have questions about your SANUS product, give us a call at 1-800-359-5520. We're ready to help!  
'Monthly prize' rules and restrictions apply. Visit [SANUS.com](http://SANUS.com) for more info.

800-359-5520 (UK: 0800-056-2853) • [info@sanus.com](mailto:info@sanus.com) • [sanus.com](http://sanus.com)

©2015 Milestone AV Technologies. All rights reserved. SANUS is a division of Milestone.  
All other brand names or marks are used for identification purposes and are trademarks of their respective owners.

SANUS • 6436 City West Parkway • Eden Prairie, MN 55344 USA

6901-002525 00